

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome

General description (Fig. 1)

- Precision shaver
 - Precision trimmer
 - Nose trimmer
 - Full-size hair trimmer
 - On/off button
 - Socket for small plug
 - Stubble comb 3/64in. (1mm)
 - Stubble comb 5/64in. (2mm)
 - Adjustable comb 1/8in. - 9/32in. (3-7mm)
 - Hair comb 3/8in. (9mm)
 - Hair comb 15/32in. (12mm)
 - Hair comb 21/32in. (16mm)
 - Body comb 1/8in. (3mm)
 - Supply unit
 - Charge indicator
 - Small plug
- Not shown: cleaning brush, pouch

Important safety information

Read this important information carefully before you use the appliance and its accessories and save it for future reference. The accessories supplied may vary for different products.

Danger

- Keep the supply unit dry (Fig. 2).

Warning

- To charge the battery, only use the detachable supply unit (A00390) provided with the appliance.
- The supply unit contains a transformer. Do not cut off the supply unit to replace it with another plug, as this causes a hazardous situation.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Always unplug the appliance before you clean it under the tap.
- Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.
- Do not open the appliance to replace the rechargeable battery.

Caution

- Never immerse the charging stand in water and do not rinse it under the tap (Fig. 2).
- Never immerse the appliance in water. Do not use the appliance in the bath or shower.
- Never use water hotter than 60°C to rinse the appliance.
- Only use this appliance for its intended purpose as shown in the user manual.
- For hygienic reasons, the appliance should only be used by one person.
- Do not use the supply unit in or near wall sockets that contain an electric air freshener to prevent irreparable damage to the supply unit.
- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.

Electromagnetic fields (EMF)

- This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

General

- This appliance can be safely cleaned under the tap (Fig. 3).
- The supply unit is suitable for mains voltages ranging from 100 to 240 volts.
- The supply unit transforms 100-240 volts to a safe low voltage of less than 24 volts.

Charging

When the appliance has charged for 16 hours, it has a operating time of up to 80 minutes.

- Make sure the appliance is switched off.
- Insert the small plug into the appliance and put the supply unit in the wall socket (Fig. 4).
The light on the supply unit lights up to show that the shaver is charging.

Note: The light on the supply unit does not change colour and does not go out when the appliance is fully charged.

- After charging, remove the supply unit from the wall outlet and pull the small plug out of the appliance.

Using the appliance

Note: Switch off and clean the appliance after each use.

Detaching and attaching cutting elements

- To detach a cutting element, push upwards against the teeth of the cutting element and take it off the handle (Fig. 5).
- To attach a cutting element, insert the lug of the cutting element into the guiding slot at the front and push the back of the cutting element onto the appliance (click) (Fig. 6).

Detaching the precision shaver and nose trimmer

- Place your finger on the arrow at the back of the attachment and push it off the handle in the direction of the arrow (Fig. 7).

Attaching and detaching combs

- To attach any type of guard onto a cutting element, slide the front part of the guard onto the teeth of the cutting element. Then push down the center of the guard with your fingers or the palm of your hand (click) (Fig. 8).
- To detach any type of comb from the cutting element, carefully pull its back part off the appliance and then slide it off the cutting element (Fig. 9).

Note: When trimming for the first time, start by using the comb with the maximum trimming length setting to familiarize yourself with the appliance.

Turning the appliance on and off

To switch on the appliance, slide the on/off button up (Fig. 10).
To switch off the appliance, slide the on/off button down.

Attachments for use on beard

Full-size hair trimmer

Use the full-size hair trimmer without a comb to trim hair close to the skin (to a length of 1/32in (0.5mm)) or to create clean lines around your beard, neck and sideburns.

- To trim hair close to the skin, place the flat side of the cutting element against your skin and make strokes against the direction of hair growth (Fig. 11).
- For contouring, hold the cutting element perpendicular to the skin and move it upwards or downwards with gentle pressure (Fig. 12).

Beard combs

Attach a beard comb to the full-size hair trimmer to trim your beard and moustache evenly. The appliance comes with 3 beard combs. The hair length settings are indicated on the combs. The settings correspond to the remaining hair length after trimming.

Comb	inch	mm
Stubble comb	3/64in.	1mm
Stubble comb	5/64in.	2mm

Adjustable 1/8in. - 9/32in. 3mm-7mm comb

- Attach the comb to the full-size hair trimmer.
- Adjustable comb: Push the length selector to the left or right to select the desired hair length setting.
- To trim the most effective way, move the comb against the direction of hair growth. Make sure the surface of the comb always stays in contact with the skin.

Attachments for use on body

- Use the green body guard to trim body hair.
- Make sure hair is clean and dry as wet hair tends to stick to the body and, when trimming sensitive areas, always use a body guard.
- Since all hairs do not grow in the same direction, you may want to try different trimming positions (i.e. upwards, downwards, or across). Practice is best for optimum results.
- Always make smooth and gentle movements and be sure the surface of the guard always stays in contact with your skin.
- When too many hairs have accumulated on the product, blow the hairs out before use, for best trimming results.

Body comb

Attach the body comb to the full-size hair trimmer to trim hairs below the neckline. The appliance comes with 1 body comb. The hair length settings is indicated on the comb. The setting corresponds to the remaining hair length after trimming.

Comb	inch	mm
Body comb (green)	1/8in.	3mm

- Attach the body comb to the full-size hair trimmer.
- To trim in the most effective way, stretch the skin with your free hand and move the comb against the direction of hair growth (Fig. 13). Make sure the surface of the comb always stays in contact with the skin.

Attachments for use on head

Full-size hair trimmer

Use the full-size hair trimmer without a comb to clip the hair on your head very close to the skin (1/32in (0.5mm)) or to contour the neckline and area around the ears.

- To contour the hairline around the ears, comb the hair ends over the ears.
- Tilt the appliance in such a way that only one edge of the cutter blades touches the hair ends when you shape the contours around the ears.
- To contour the nape of the neck or sideburns, turn the appliance and make downward strokes (Fig. 14).
- Move the appliance slowly and smoothly following the natural hairline.

Hair combs

Attach a hair comb to the full-size hair trimmer to evenly trim the hairs on your head. The appliance comes with 3 hair combs. The hair length settings are indicated on the combs. The settings correspond to the remaining hair length after trimming.

Comb	inch	mm
Hair comb	3/8in.	9mm
Hair comb	15/32in.	12mm
Hair comb	21/32in.	16mm

- Attach a comb to the full-size hair trimmer.
- Move the trimmer slowly over the crown from different directions to achieve an even result. Make sure the surface of the comb always stays in contact with the skin.

- Always make a trimmer against the direction of hair growth (Fig. 15). Press lightly.
- Make overlapping passes over the head to ensure that all hair that should be cut has been cut.

Precision attachments for use on face

Precision trimmer

Use the precision trimmer to create fine lines and contours around your facial style, close to the skin (to a length of 1/32in./0.5mm).

- Hold the precision trimming head perpendicular to the skin and move the trimming head upwards or downwards with gentle pressure (Fig. 16).

Nose trimmer MGxxxx

Use the nose trimmer to trim your nose hair and ear hair.

- Make sure nasal passages are clean. Make sure outer ear channels are clean and free from wax.
- Do not insert the tip more than 3/16in./5mm.
- Always clean the attachment after each use.

Trimming nose hair

- Gently move the tip in and out of nose while turning it around to remove unwanted hairs (Fig. 17).

Trimming ear hair

- Slowly move the tip round the ear to remove hairs that stick out beyond the rim of the ear.
- Gently move the tip in and out of the outer ear channel to remove unwanted hairs (Fig. 17).

Precision shaver

Use the precision shaver after trimming, to shave unwanted hairs on cheeks, chin and along the beard with precision. Make sure to pre-trim your beard first, with the full-size hair trimmer without comb, to obtain the best result.

Note: Use the precision shaver to remove remaining hairs and detailing your beard style. It is not suitable for a full face shave.

- Gently press the precision shaver onto the skin and shave along contoured edges to remove any unwanted hairs (Fig. 18).

Cleaning

Never use scouring pads, abrasive cleaning agents or aggressive liquids such as gasoline or acetone to clean the product.

Never dry the trimmer teeth with a towel or tissue, as this may damage the trimmer teeth.

- Gently press the precision shaver onto the skin and shave along contoured edges to remove any unwanted hairs (Fig. 18).

After every use: cleaning under the tap

- Turn off the appliance and disconnect from the power outlet.
- Remove any comb or cutting element from the appliance.
- Rinse the hair chamber under a warm tap.
- Clean the cutting element and comb under a warm tap (Fig. 19).
- Carefully shake off excess water and let all parts air dry completely.

Thorough cleaning

- Turn off the appliance and disconnect from the power outlet.
- Wipe the handle of the appliance with a dry cloth.
- Remove any comb or cutting element from the appliance.
- Remove any hairs that have accumulated in the hair chamber with the cleaning brush supplied.
- Remove any hairs that have accumulated in the cutting elements and/or combs with the cleaning brush supplied.
- Clean the cutting elements under a warm tap.
- Clean the combs under a warm tap.
- Carefully shake off excess water and let all parts air dry completely.

Cleaning the nose trimmer

Clean the nose trimmer immediately after use and when a lot of hair or dirt has accumulated on the nose trimmer head.

- Rinse the nose trimmer head with hot water (Fig. 20).
- Turn on the appliance and rinse the nose trimmer head once more to remove any remaining hairs. Then turn off the appliance again.

For a thorough clean, immerse the nose trimmer head in a bowl with warm water for a few minutes and then turn on the appliance to remove stubborn hair/debris.

- Carefully shake off excess water and let all parts air dry completely.

Cleaning the precision shaver

- Hold the precision shaver at the grooves on each side and pull the top part off the bottom part (Fig. 21).
- Blow and/or shake out any hair that has accumulated inside the precision shaver.
- Clean the top part of the precision shaver under a warm tap (Fig. 22).
- Carefully shake off excess water and let all parts air dry completely.
- Reattach the top part onto the bottom part of the precision shaver.

Storage

- Store the appliance in the pouch supplied.

Note: Make sure the appliance is dry before you store it in the pouch.

Ordering accessories

To buy accessories or spare parts, visit www.shop.philips.com/service or go to your Philips dealer. You can also contact the Philips Consumer Care Center in your country (see the international warranty leaflet for contact details).

Recycling

- Do not throw away the product with the normal

household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

- This product contains a built-in rechargeable battery which shall not be disposed of with normal household waste. We strongly advise you to take your product to an official collection point or a Philips service centre to have a professional remove the rechargeable battery.
- Follow your country's rules for the separate collection of electrical and electronic products and rechargeable batteries. Correct disposal helps prevent negative consequences for the environment and human health.

Removing the rechargeable battery

Only remove the rechargeable battery when you discard the product. Before you remove the battery, make sure that the product is disconnected from the wall socket and that the battery is completely empty.

Take any necessary safety precautions when you handle tools to open the product and when you dispose of the rechargeable battery.

- Take the cutting element from the handle and remove the on/off slide by using a flat head screwdriver (Fig. 23).
- Insert a flathead screwdriver between the top rim and the handle. Twist the screwdriver to break the snap connections that connect the inner body to handle (Fig. 24).
- Pull the inner body out of the handle. Insert the screwdriver between the battery and the frame. Tilt the screwdriver to pop the battery out of the frame (Fig. 25).
- Cut the wires from the battery (Fig. 26).

Warranty and support

If you need information or support, please visit www.philips.com/support or read the international warranty leaflet.

Warranty restrictions

Cutting units are not covered by the terms of the international warranty because they are subject to wear.