 
 
 
 
 
 
 
 
 
 
 
 
 


 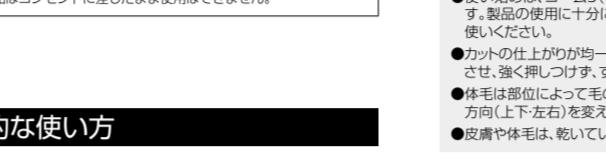
 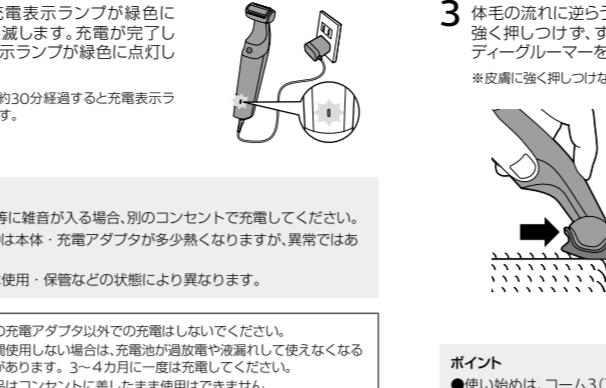


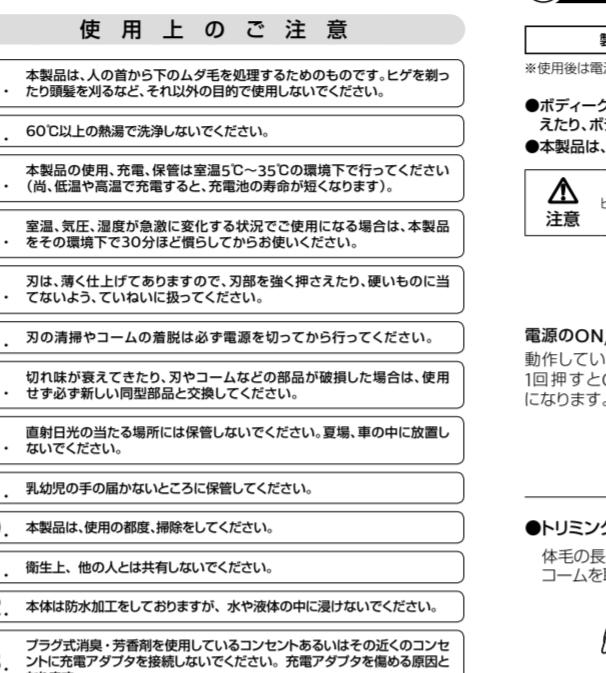
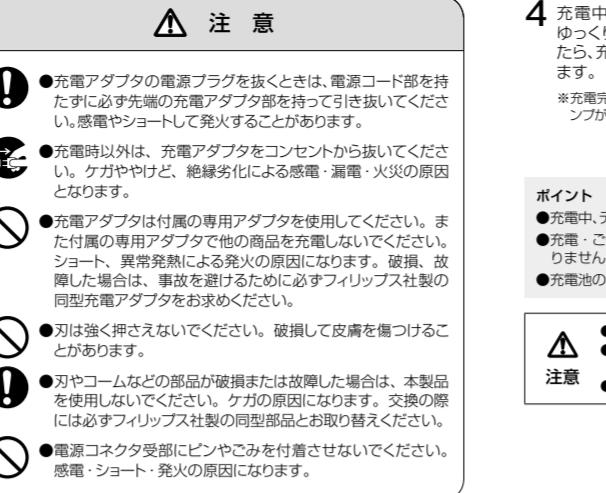
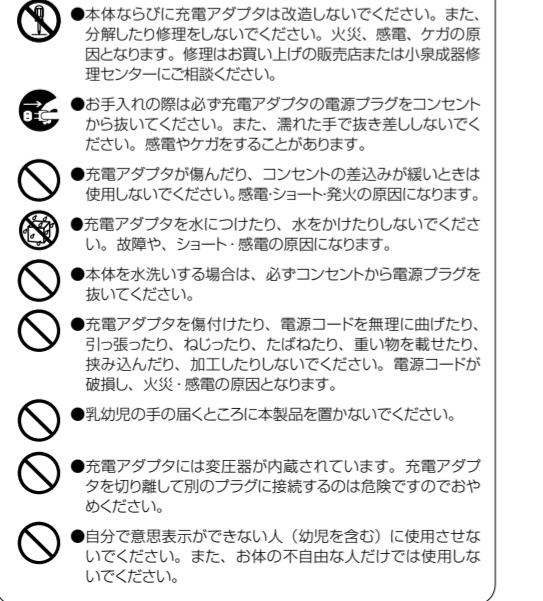
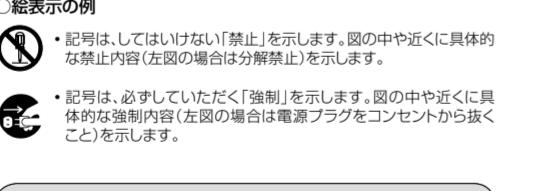
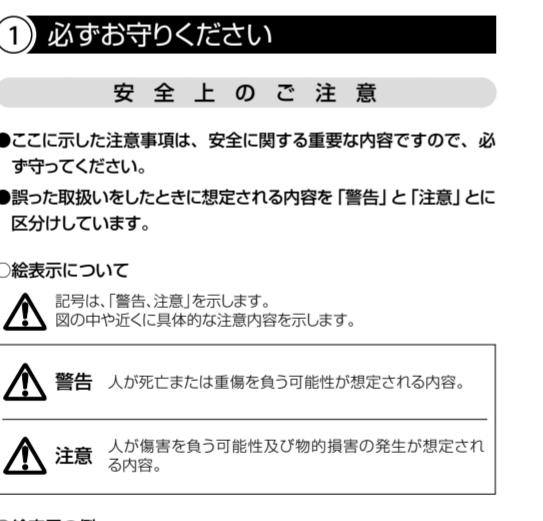


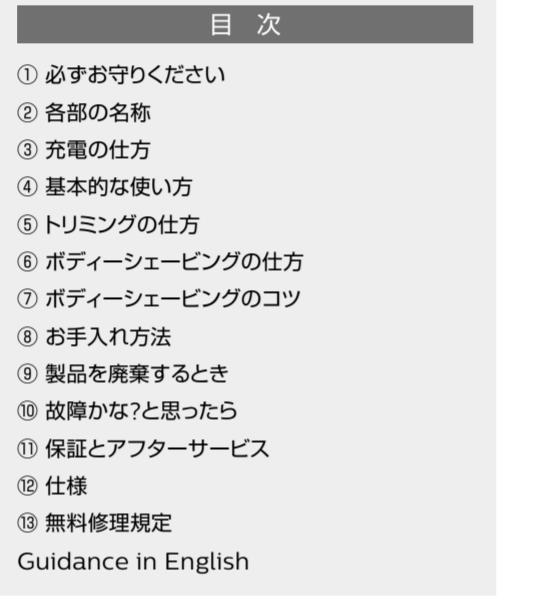


フィリップス ボディグルーマー  
品番 BG5020/15

取扱説明書  
保証書付

保証書は、本取扱説明書の裏面の方針についてお読みのうえ、正しくお使いください。また、お読みになった後は、お使いになる方がいつでも見られるところに必ず保管してください。

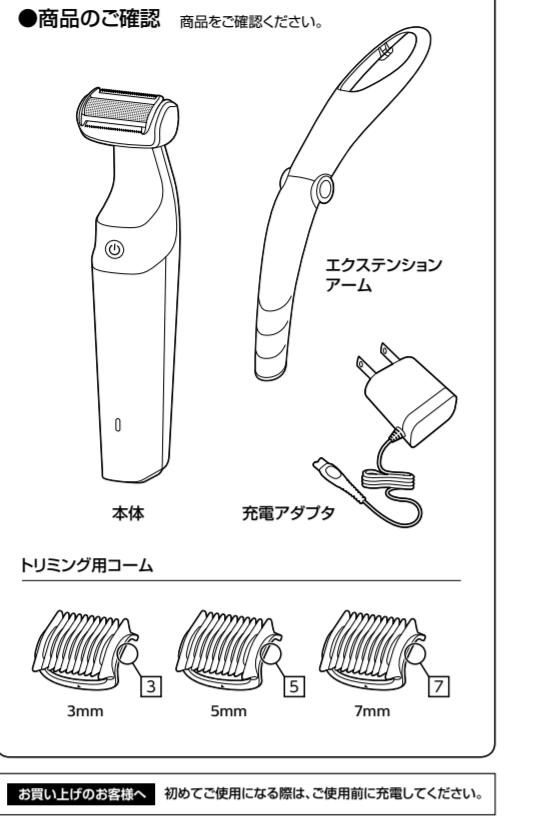

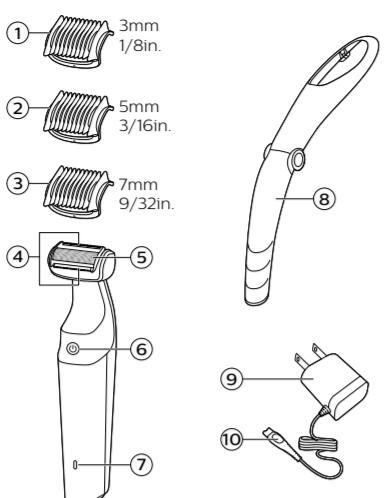**General**

- This appliance is waterproof. It is suitable for use in the bath or shower and for cleaning under the tap. For safety reasons, the appliance can therefore only be used without cord.
- The supply unit is suitable for mains voltages ranging from 100 to 240 volts.
- The supply unit transforms 100-240 volts to a safe low voltage of less than 24 volts.

**Charging**

Charging takes approx. 1 hour. Charge the appliance before you use it for the first time and when the display indicates that the battery is almost empty.

- If the appliance is subjected to a major change in temperature, pressure or humidity, let the appliance acclimate for 30 minutes before you use it.

- 1 Make sure the appliance is switched off.
- 2 Insert the small plug into the shaver and put the supply unit in the wall socket (Fig. 3).
- 3 After charging, remove the supply unit from the wall socket and pull the small plug out of the appliance.

**Operating time**

When the appliance is fully charged, it has a cordless operating time of up to 60 minutes.

**Battery status indications**

- When the battery is almost empty, the battery status indicator flashes orange (Fig. 2).
- When the appliance is charging, the battery status indicator flashes green (Fig. 3).
- When the battery is fully charged, the battery status indicator lights up green continuously.

Note: After approx. 30 minutes, the light goes out automatically.

**Using the appliance**

This product is only intended for shaving and trimming body parts below the neckline. Do not use it to shave or trim facial (Fig. 5) or scalp hair (Fig. 6).

Always check the appliance and all accessories before you use them. Do not use the appliance or any accessory if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.

- Use this appliance for its intended household use as described in this manual.
- For hygienic reasons, the appliance should only be used by one person.
- Trimming is easier when the skin and hair are dry.

Note: This appliance is for cordless use only.

**Switching the appliance on and off**

- 1 Press the on/off button once to switch the appliance on or off (Fig. 7).

**Attaching and detaching combs**

- 1 To attach a comb, snap the front part of the comb onto the teeth of the shaving unit and push the projection at the back of the comb into the appliance ('click') (Fig. 8).
- 2 To detach a comb, carefully pull the back part off the appliance and then remove it from the shaving unit (Fig. 9).

**Trimming**

- If you are trimming for the first time, be careful. Do not move the appliance too fast. Make smooth and gentle movements.
- Since all hairs do not grow in the same direction, you may want to try different trimming positions (i.e. upwards, downwards, or across). Practice is best for optimum results.
- Always make smooth and gentle movements and be sure the surface of the comb always stays in contact with your skin.
- Body hair can be trimmed wet or dry, however dry is preferable because wet hair tends to stick to the body.
- When trimming sensitive areas, always use a trimming comb.

**Caution**

The trimming comb allows you to cut hair to a length of 3 mm.

**Trimming**

- 1 Snap the trimming comb onto the appliance (Fig. 8).
  - 2 Press the on/off button to switch on the appliance (Fig. 7).
  - 3 Move the appliance against the direction of hair growth (Fig. 11), (Fig. 12).
- Note: Make sure that the flat part of the trimming guard is always fully in contact with the skin.
- 4 Switch off and clean the appliance after each use.

**Shaving**

- When shaving sensitive areas for the first time, you may experience some discomfort, irritation or reddening of the skin. This is normal as your skin needs time to adjust to shaving.
- If your hair is longer than 10mm, trim hair to a length of 3mm first for optimum shaving results.
- For dry use, make sure that your skin is clean and dry before using the shaving unit.
- For wet use, prepare your skin with lathered soap or shaving foam before you use the appliance.

- 1 Remove any trimming comb from the appliance (Fig. 9).
- 2 Press the on/off button to switch on the appliance (Fig. 7).
- 3 Stretch your skin taut with your free hand (Fig. 13).

**Electromagnetic fields (EMF)**

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Gently press the shaving unit onto skin and move it slowly and smoothly against the direction of hair growth (Fig. 14). (Fig. 15).

- Do not press too hard. Too much pressure can distort the foil and cause skin irritation.
- Make sure the shaving unit is always in full contact with the skin.
- The shaver is bi-directional, which means that you can shave by moving the appliance up and down. Shave against the direction of the hair growth for optimal performance.
- 4 Switch off and clean the appliance after each use.

**Shaving with the back shaving attachment**

Note: The back shaving attachment is suitable for both wet and dry use.

- 1 Press and hold the release button (1) and open the back shaving attachment (Fig. 16) (2) in the preferred setting.
- 2 Place the bottom of the appliance in the lower part of the back shaving attachment. Then press the top against the top part of the holder until it locks into place with a click (Fig. 17).
- 3 Press the on/off button to turn on the appliance (Fig. 10).
- 4 Shave your back by moving the back shaving attachment up and down by its handle (Fig. 18).

Note: For your ease of use, the back shaving attachment can be folded to different angles (Fig. 19). Use a smaller angle to shave your lower back (Fig. 20).

- 5 To remove the product from the back shaving attachment, pull the top of the product towards you until it unlocks from the holder (Fig. 21).

- 6 To close the back shaving attachment, press and hold the release button (1) and push the handle against the holder (2) (Fig. 22).

**Cleaning**

**Regular cleaning guarantees better shaving results.**

**Never clean, remove or replace a shaving or cutting unit while the appliance is switched on.**

**Always check if the water is too hot, to prevent burning your hands.**

**Never dry cutting units or shaving foils with a towel or tissue, as this may cause damage.**

**Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.**

- 1 switch off the appliance (Fig. 7).

- 2 Remove any trimming comb from the appliance (Fig. 9).

- 3 Remove the shaving unit by pulling it off the appliance (Fig. 24).

- 4 Hold the shaving foil head by the plastic housing only.

- 5 Rinse the shaving foil head with warm running tap water (Fig. 25).

- 6 Allow the shaving unit to air dry completely.

- 7 Rinse the hair chamber under warm running tap water to remove any residues (Fig. 26).

- 8 Reattach the shaving unit by snapping it back onto the appliance (Fig. 27) ('click').

**Ordering accessories**

To buy accessories or spare parts, visit [www.shop.philips.com/service](http://www.shop.philips.com/service) or go to your Philips dealer. You can also contact the Philips Consumer Care Center in your country (see the international warranty leaflet for contact details). The following accessories and spare parts are available:

- TT2000 Philips replacement shaving unit.

**Replacement**

For maximum shaving performance, we advise you to replace the shaving unit every year (TT2000). If the shaving unit is worn or damaged, do not use the appliance and replace the shaving unit immediately. Always replace the shaving unit with an original Philips TT2000 shaving unit. Accessories (Fig. 23).

- 1 Switch off the appliance and disconnect it from the wall socket (Fig. 7).

- 2 Pull the shaving unit out of the appliance (Fig. 24).

Note: The foil is delicate. Handle the shaving unit with care.

- 3 Snap the new shaving unit into the appliance ('click') (Fig. 27).

- 4 Check if the shaving unit is firmly attached before you use the appliance.

**Recycling**

- Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

- This product contains a built-in rechargeable battery which shall not be disposed of with normal household waste. Please take your product to an official collection point or a Philips service center to have a professional remove the rechargeable battery.
- Follow your country's rules for the separate collection of electrical and electronic products and rechargeable batteries. Correct disposal helps prevent negative consequences for the environment and human health.

**Removing the rechargeable battery**

**Only remove the rechargeable battery when you discard the product. Before you remove the battery, make sure that the product is disconnected from the wall socket and that the battery is completely empty.**

**Take any necessary safety precautions when you handle tools to open the product and when you dispose of the rechargeable battery.**