

PHILIPS

フィリップス 電動シェーバー

フィリシェーブ

品番 **HQ 8894**



取扱説明書

保証書付

保証書は、この取扱説明書の裏側についておりますので記入を受けてください。


PHILIPS

フィリップス・フィリシェーブをお買い上げいただき、まことにありがとうございます。長い間で愛用いただくために、ご使用前にこの取扱説明書をよくお読みのうえ、正しくお使いください。


また、お読みになった後は、お使いになる方がいつでも見られるところに必ず保管してください。

商品のご確認


商品をご確認ください

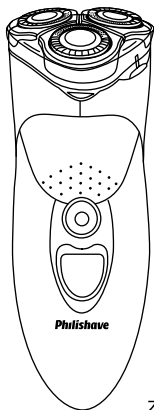


本 体

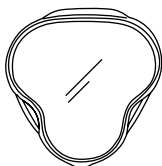


保護キャップ




クリーニングブラシ

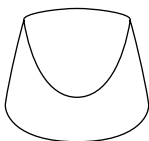

スタンド

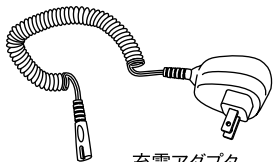

充電アダプタ

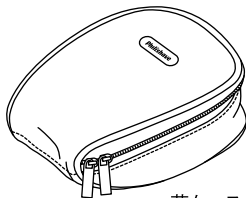

革ケース

※改良の為、仕様を予告なく変更することがあります。

目次

● はじめに	商品のご確認……………1
	目次……………2
	必ずお守りください……………3・4
	各部の名称……………5・6
	充電の仕方……………7
	各国の電圧……………8
● ご使用方法	使い方……………9・10
	トリマーの使い方……………11
	お手入れ方法……………12
	刃の交換と分解掃除の仕方……………13
	リチウムイオン電池について……………14
● 困ったとき	故障かな？ と思ったら……………15
● 英文解説	Guidance in English……………16~23
● 保証	保証とアフターサービス……………24
	仕様／お客様情報センター……………25
	無料修理規定……………26
	保証書……………最終ページ

必ずお守り ください

安全上のご注意

- ここに示した注意事項は、安全に関する重要な内容ですので、必ず守ってください。
- 誤った取扱をしたときに想定される内容を「警告」と「注意」とに区別しています。

○絵表示について



警告 人が死亡または重傷を負う可能性が想定される内容。



注意 人が傷害を負う可能性及び物的損害のみの発生が想定される内容。

○絵表示の例



・記号は、「危険、警告、注意」を示します。図の中や近くに具体的な注意内容(左図の場合は高温注意)を示します。



・記号は、してはいけない「禁止」を示します。図の中や近くに具体的な禁止内容(左図の場合は分解禁止)を示します。



・記号は、必ずしていただく「強制」を示します。図の中や近くに具体的な強制内容(左図の場合は電源プラグをコンセントから抜くこと)を示します。



警告



●シェーバー本体ならびに充電アダプタは改造しないでください。また、修理技術者以外の人は、分解したり修理をしないでください。火災、感電、けがの原因となります。修理はお買い上げの販売店またはフィリップスお客様情報センターにご相談ください。



●お手入れの際は必ず電源プラグをコンセントから抜いてください。また、濡れた手で抜き差ししないでください。感電やけがをすることがあります。



●充電アダプタが傷んだり、コンセントの差込みが緩いときは使用しないでください。感電・ショート・発火の原因になります。



●充電アダプタを傷付けたり、無理に曲げたり、引張ったり、ねじったり、たばねたり、重い物を載せたり、挟み込んだり、加工したりしないでください。電源コードが破損し、火災・感電の原因となります。



●国内での使用の場合、交流100V以外では使用しないでください。火災・感電の原因となります。



●シェービングユニット部以外の水洗いや浴室での使用は絶対にしないでください。感電する場合があります。



●シェーバー本体を水につけたり、水をかけたりしないでください。ショート・感電のおそれがあります。


⚠ 注意

- 電源プラグを抜くときは、充電アダプタの電源コード部を持たずに必ず先端の電源プラグ部を持って引き抜いてください。感電やショートして発火することがあります。
- 刃は強く押さえないでください。破損して肌を傷つけることがあります。
- 充電時または交流での使用時以外は、電源プラグをコンセントから抜いてください。ケガややけど、絶縁劣化による感電・漏電・火災の原因になります。
- ご使用の前に刃の破れや変形がないかを確認してください。肌を傷つけることがあります。
- 電源コネクタ受部にピンやごみを付着させないでください。感電・ショート・発火の原因になります。

使用上のご注意


1. 電気かみそりのご使用が初めての方や、フィリップス以外の電気かみそりをお使いになっていた方は、剃り方に慣れるまで2~3週間かかることがあります。
2. 電池の性能を保つため周囲の温度は、0~40℃以内で使用してください。(尚、充電は5~35℃以内の環境で行ってください。低温や高温で充電すると、充電電池の寿命が短くなります。)
3. 外刃は、薄く仕上げてありますので、刃部を強く押さえたり、硬いものに当てないように、ていねいに扱ってください。
4. 刃の着脱、清掃は必ずスイッチを切ってから行ってください。
5. 刃の寿命は1日約3分のご使用で約5年間が目安です。但し、使い方やヒゲの状態により異なりますので切れ味が衰えてきたり、刃が破損した場合は、必ず新しい刃と交換してください。
6. 極端に高温または低温の場所、直射日光の当たる場所には保管しないでください。夏場、車の中に放置しないでください。
7. 使用済みの電池は、ゴミ箱に捨てずに販売店に返却してください。
8. 乳幼児の手の届かないところに保管してください。
9. 刃部については、なるべく使用の都度、掃除をしてください。
10. 充電が完了したらプラグを抜いてください。
11. 附属の当社専用充電アダプタを使用してください。
12. 交流式での連続使用(5分以上の使用)はおやめください。

各部の名称

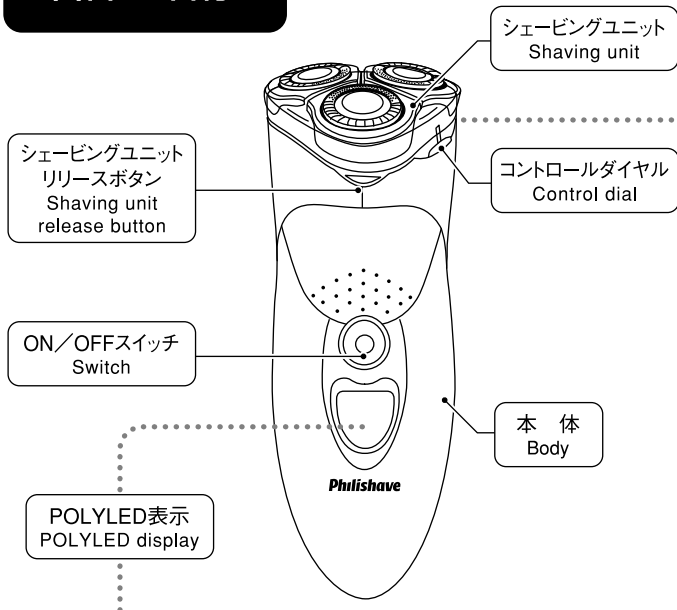

表示の切換え

表示はデジタル表示とバーグラフ表示に切り替えることができます。
スイッチを切ると、5秒後に全ての表示が消えます。

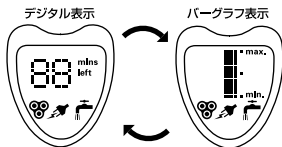

- スイッチを3秒間押し続けた後、さらにスイッチを押すと表示が切り替わります。
- 表示が替わって数秒たつと、「ピッ」という信号音がして表示が固定されます。



刃の交換
めやす表示 →P12

この表示は、点灯後実使用时间
約30分(3分/10日)後に消灯します。




充電催促表示
→P7




クリーニング
めやす表示 →P12

この表示は、点灯後約30秒後
に消灯します。

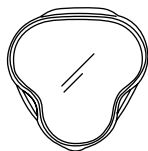


保護キャップ
Protection cap



電源コネクタ受部
Connector


電源コード部
Cord

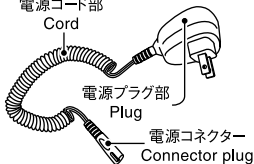

電源プラグ部
Plug

電源コネクタ
Connector plug

充電アダプタ
Power plug

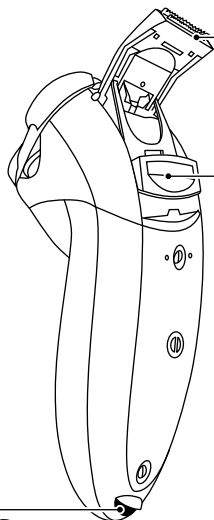


トリマー
Trimmer


トリマーリリースノブ
Trimmer release knob



スタンド
Stand

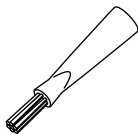

クリーニングブラシ
Cleaning brush

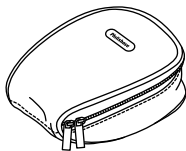

革ケース
Leather case

シェービングユニット分解部品




ユニットフレーム
Unit frame



外刃
Cutter guard



内刃
Cutter blade




保持板
Retaining plate

刃の位置はあらかじめ決まっていますので分解掃除される場合は、ご注意ください。


充電の仕方

初めてお使いになるときや、長い間で使用にならなかったときは、充電しないと使用できません。充電電池の活性化のために2時間半の充電を行ってください。通常の充電時間は約1時間です。

電源コネクタを本体の電源コネクタ受部につないで、ご家庭のコンセントから充電してください。

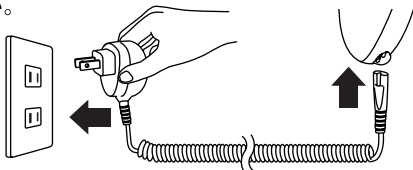

充電表示

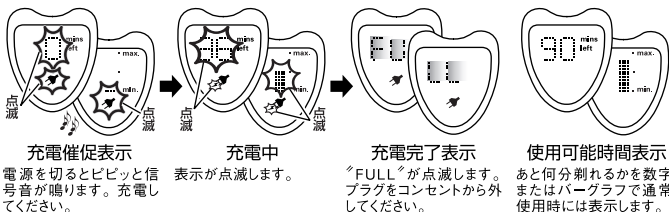

充電催促表示

電源を切るとビピッと信号音が鳴ります。充電してください。

充電中

表示が点滅します。

充電完了表示

「FULL」が点滅します。プラグをコンセントから外してください。

使用可能時間表示

あと何分刺れるかを数字、またはバーグラフで通常使用時には表示します。

※表示のデモンストレーション機能があります。設定モードの途中でさらにスイッチを3秒間押すと切り替わり、もう一度ONスイッチを押すと通常表示に戻ります。

※初期の満充電後の使用可能時間表示は「100」ですが、それ以降の使用可能時間表示の表示は使用状況(使用時間、ヒゲ毛の質等)により変わります。目安として満充電で約100分(1日/3分)刺れます。



注意

過充電を防ぐため、2日間(48時間)以上の長時間充電はしないでください。当社専用の充電アダプタ以外での充電はしないでください。長期間ご使用しない場合や、使ったり使わなかったりして保管しておくとき過放電が液漏れして使えなくなります。

充電電池の寿命

通常のご使用方法では、充電電池の寿命は充放電300~500回ほどです。

いくら充電しても使用時間が極端に短いときは、シェーバーが完全に止まるまで作動させてから、もう一度充電してください。それでも改善されないときは、充電電池の寿命です。販売店にお持ちください。満充電後の使用時間が3分の2程度になったら、充電電池の交換時期です。お買い求めの販売店へ充電電池の交換を依頼してください。


海外でのご使用も可能です。ただし、アダプタや電圧など現地で充分お確かめのうえご使用ください。

各国の電圧

1. プラグアダプタなしで使える国(地域)と電圧

No plug adaptor needed.


カナダ Canada	120V	韓国 Korea	100/220V	台湾 Taiwan	110V
中国 China	220V	メキシコ Mexico	125V	タイ Thailand	220V
グアム Guam	120V	フィリピン Philippines	220V	アメリカ U.S.A	120V
日本 Japan	100V	サイパン Saipan	110V	ベネズエラ Venezuela	120V

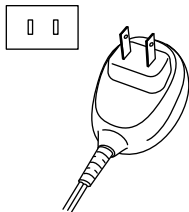

2. プラグアダプタを使用する国(地域)と電圧

Plug adaptor needed.

オーストリア Austria	220V	ドイツ Germany	220V	ニューカドニア New Caledonia	220V
アルゼンチン Argentina	220V	ギリシャ Greece	220V	ノルウェー Norway	230V
ベルギー Belgium	220V	ハンガリー Hungary	220V	ポーランド Poland	220V
ブラジル Brazil	220V	インド India	230V	南アフリカ South Africa	220V
チリ Chile	220V	インドネシア Indonesia	120V	スペイン Spain	220V
(旧ソ連) C.I.S	127/220V	イラン Iran	220V	スウェーデン Sweden	220V
デンマーク Denmark	220V	イスラエル Israel	230/127V	スイス Switzerland	230V
エチオピア Ethiopia	220V	イタリア Italy	220V	チュニジア Tunisia	220V
フィンランド Finland	220V	レバノン Lebanon	110V	オーストラリア Australia	240V
フランス France	220V	オランダ Netherlands	220V		

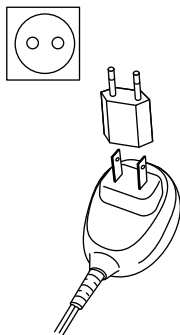


注意: プラグアダプタは別途ご購入ください。

使い方

警告 浴室では使用しないでください(感電、ショートの原因になります)。


1 コンセントに差し込んだ状態で正しく充電されているか確認してください。充電が完了している場合は、コンセントから電源プラグを抜いて使用してください。

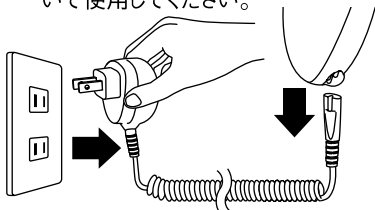

2 肌が乾いた状態でご使用ください。



3 コントロールダイヤルで刃圧を調整します。刃圧がソフト(S)からノーマル(N)まで調節できます。お肌が敏感な方はダイヤルを「S」側に、比較的丈夫な方は「N」側に調整してご使用ください。




刃圧を下げる



刃圧を上げる

4 スイッチを1回押し電源をONにします。

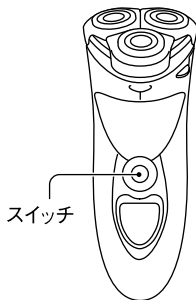



5 刃を肌に密着させて、剃ります。


上手に
剃るには

刃を肌に密着させ、クルクル回転させながら軽く動かすのがコツです。



ほお

肌を伸ばしながらヒゲを立たせるように剃ります。

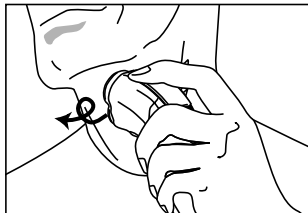


あごの裏側

刃を密着させて回転させながら剃ります。



ほおの奥から首筋

片方の手で肌を後ろに引っ張りながら剃ります。

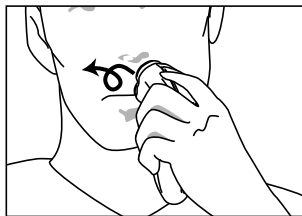

鼻の下

鼻の下を伸ばし、小さく回しながら剃ります。


電気かみそりのご使用が初めての方や、フィリップス以外の電気かみそりをお使いになっていた方は、剃り方に慣れるまで2～3週間かかることがあります。

トリマーの 使い方

もみあげ、
ヘアラインの整え方


⚠ 警告 浴室では使用しないでください(感電、ショートの原因になります)。

- 1** スイッチをONにし、トリマーリリースノブを押し上げながらトリマーを出します。トリマーの先端の刃が往復してカットします。使用中はトリマーリリースノブを押し上げた状態で使用してください。

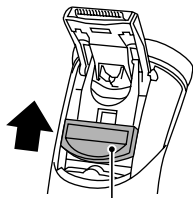

トリマーリリースノブ


2

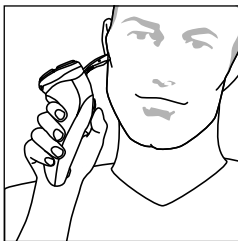

鏡を見ながら刃がカットしたい髪の毛と直角に押しあたるようにしてください。一度に切らずに、少しずつ調髪してください。

注意:あまり押し当て過ぎると肌を傷めますのでご注意ください。

トリマーのお手入れ方法

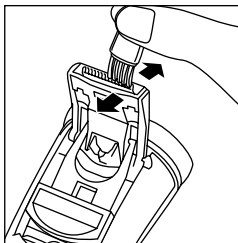


ご使用ごとに、必ずスイッチをOFFにしてからクリーニングブラシで刃の部分轻轻一掃除してください。

毎回の手入れと水洗いの仕方

- ※洗剤は使用しないでください。
- ※熱めのお湯(60℃~80℃)をお使いください。
ただし、熱湯はお止めください

お手入れ 方法



クリーニングめやす表示

ビーと信号音が鳴り、(III)表示が点滅します。ユニット内部を洗浄してください。通常使用で1週間に1回程度です。



刃の交換めやす表示


電源を切った後に3秒間「ビー」という音とともにこの表示が出たらシェービングヘッドの交換めやす時期です。表示は2週間続き、信号音が1週間後に5秒、2週間後には10秒鳴ります。




注意

- お手入れの際は、電源コンセントから充電アダプタを抜き、スイッチをOFFしてから水洗いしてください。
- シェービングユニット部は水洗いできますが、本体は水中に浸けないでください。
- ユニットを乾燥させる時に、タオルやティッシュペーパーを使用しないでください。刃を傷める場合があります。


- 1** シェービングユニットリリースボタンを押し、シェービングユニットを開きます。

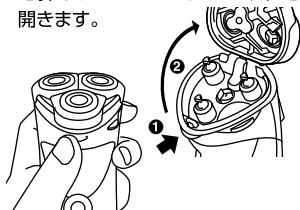

- 2** シェービングユニット表面を洗います。ヒゲクズが流れ落ちます。

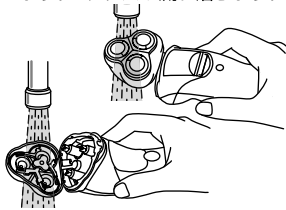

- 3** シェービングユニット内部を洗います。

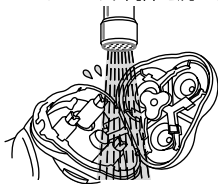

- 4** 細かい部分は、シェービングユニットが乾いてからクリーニングブラシで掃除してください。





水洗いの後は充分乾燥させてからシェービングユニットを閉めてください。乾燥が不十分な場合、臭いが出る原因となります。



刃の交換と 分解掃除の仕方

刃の位置は、あらかじめ決まっていますので分解掃除される場合は、ご注意ください。


- 1** シェービングユニットリリースボタンを押し、シェービングユニットを開けます。**2** シェービングユニットの脇を持って引っ張ると本体からはずすことができます。

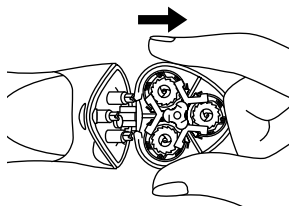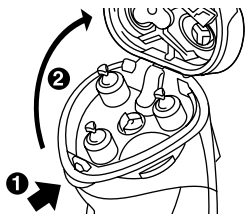


- 3** シェービングユニットの中央のビスを矢印の方向に回すと保持板がはずれます。**4** 保持板をはずして回転刃のそれぞれを分解し、掃除をします。刃の位置と、内刃・外刃の組み合わせは変えないでください。

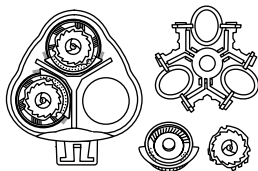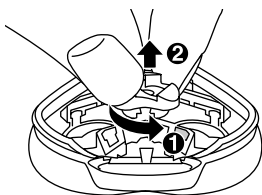

- 5** 内と外の組み合わせが変わらないように、ばらばらにしないでください。外刃の突き出た部分をユニット部に合わせてセットしてください。**6** 保持板の中央のビスを矢印方向に回してしっかりセットしてください。

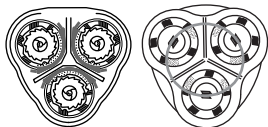

正しい刃の位置

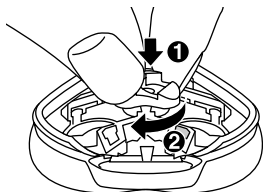

リチウムイオン電池について

リチウムイオン電池のリサイクルについて

この製品はリチウムイオン電池を使用しています。リチウムイオン電池はリサイクル可能な貴重な資源です。ご使用済みの製品の廃棄に際しては、リチウムイオン電池を取り出し、リサイクルにご協力ください。




※ご不明な場合は、お客様情報センターまでお問い合わせください。

注意 製品を廃棄するとき以外は、絶対に本体を分解しないでください。


電池の取り外し方

スイッチを“ON”にして、完全に動作しなくなるまで電池を放電させてから、行ってください。


- 1** トリマーを上げてから、本体背面のネジを⊖ドライバーではずします。
(ネジは2カ所)

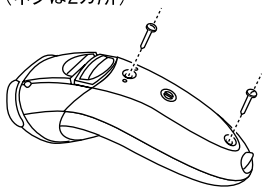

- 2** トリマーを戻し、シェービングユニットをはずします。
電源コネクタ受部を上を持ち上げて本体ケースをはずします。

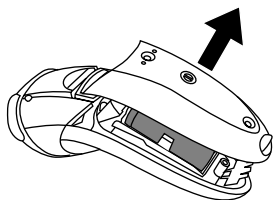

- 3** 電池をはずします。
- 電池をペンチで左右にゆすりながら取り外します。
 - 取り外した後は、⊕⊖端子がショートしないように注意してください。

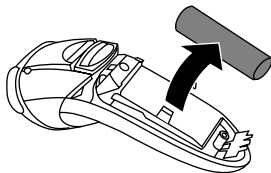

故障かな？ と思ったら

故障かな？と思ったら、
お調べください。

だんだん切れ味が
悪くなった

- シェービングユニット部が汚れていませんか？
- 外刃と内刃の間に長い毛が入り込んでいませんか？
P.12「お手入れ方法」、P.13「刃の交換と分解掃除の仕方」の項をお読みいただき、掃除をしてみてください。
- 外刃と内刃が損傷または摩耗していませんか？
損傷または摩耗しているときは、刃を交換してください。交換する刃は必ずフィリシェーブHQ 8000シリーズ用 (HQ8)を購入してください。

充電しても使用
時間が極端に短い

- シェーバーが完全に止まるまで作動させてからもう一度充電してください。
- それでも改善されないときは、充電電池の寿命です。
(使用時間が3分の2程度になったら充電電池の交換が必要です。)

充電アダプタの電源
コード部が断線している

- 充電アダプタは修理、交換できません。
新しいものをお買い求めください。

スイッチを押し
ても作動しない


- 充電はしましたか？
1時間以上の充電をしてください。

4時間充電しても充電
完了表示にならない

- 充電アダプタの電源プラグ部はコンセントにきちんと差し込まれていますか？
本体の電源コネクター受部に充電アダプタのコードがきちんと差し込まれていますか？確認してください。

以上の処置により、正常な状態に戻らない場合は、
お買い求めの販売店かお客様情報センターにお問い合わせ願います。

Warning



Please read these instructions before using the appliance and save them for future reference.

- ▶ Only use the powerplug supplied to charge the appliance.
- ▶ Make sure the powerplug and the cord do not get wet.
- ▶ The powerplug contains a transformer.
Do not cut off the powerplug to replace it with another plug as this will cause a hazardous situation.
- ▶ The shaver is watertight and can be cleaned under the tap. Do not rinse with water hotter than 80°C.
- ▶ If the mains cord of this appliance is damaged, it must always be replaced by Philips or a Service Center authorized by Philips in order to avoid hazardous situations.

The display



- ▶ You have the unique possibility to choose the display you personally prefer. The appliance offers you two kinds of displays: a number-display or a block(s) display.

- 1 Push the on/off button for about 3 seconds. The cleaning, plug and shaving head replacement symbols will appear, together with the display you are currently using.
- 2 Push briefly on the on/off button and you can switch between the two kinds of display.

Stop switching when the display of your choice is visible and wait a few seconds. You will hear a beep to confirm your personal choice.

Attention: If you start using the appliance for the first time or after a long period of disuse, it could take several minutes before anything appears on the display!

The display provides the following information:

Charging

- ▶ **The number display:**

As soon as you connect the appliance to the mains, the display goes on. 0 appears on the display together with the plug symbol and the minutes-left indication. The spark symbol starts blinking.

The display shows an increase in shaving minutes (from 0 up to 100).





► The block(s) display:

As soon as you connect the appliance to the mains, the display goes on and the min./max. indication appears together with the plug symbol. The spark symbol starts blinking. The number of blocks on the display increases from the red block to MAX.



Battery fully charged


► As soon as the battery has been fully charged, the word 'FULL' runs every 9 seconds across the display together with the plug symbol.



Remaining shaving time

The shaving time of a fully charged shaver depends on your type of beard and your shaving behaviour, and is calculated by the built-in computer.

A fully charged shaver has a cordless shaving time of up to 100 minutes.



► The number display:

The number on the display shows the remaining shaving time in minutes.



► The block(s) display:

The height of the blocks shows the remaining shaving time.



Cleaning reminder

► The tap symbol with blinking water and the short beep remind you that the appliance is due to be cleaned, which will be approx. once a week in case of normal use.



Battery running low

► The number-display:

When you switch the shaver off while the battery is running low, the plug symbol and the 0 will start blinking and you hear a few short beeps.

When you switch the shaver off, the display stays on for approx. 10 seconds.

► The block(s) display:

When you switch the shaver off while the battery is running low, the plug symbol and the red block will start blinking and you hear a few short beeps.

When you switch the shaver off, the display stays on for approx. 10 seconds.

Replacing shaving heads



- Every two years, although the exact time depends on your shaving behaviour, a few beeps will be audible for 3 seconds after you switch off the appliance and the shaving heads replacement symbol as well as the REPLACE text will be visible in the display. The symbol and the text will remain visible for 2 weeks to remind you to ensure optimal shaving performance, check shaving heads periodically after two years of use and replace if necessary. After 1 week the beeps will be audible for 5 seconds. After 2 weeks the beeps will be audible for 10 seconds.

Demonstration program



- The appliance has an unique 1-minute demonstration program. During the demonstration the appliance will be automatically switched on 4 times. Press the on/off button 6 seconds until all symbols disappear from the display. The demonstration will start automatically with the display type you have selected. You can interrupt the demonstration by pressing the on/off button.

Charging

Recharge and keep the appliance at a temperature between 0°C and 40°C.

The powerplug is suitable for mains voltages ranging from 100 to 240V.

You can also shave without charging by connecting the shaver to the mains.

Do not leave the shaver connected to the mains continuously.



- 1 Insert the appliance plug into the appliance.
Insert the powerplug into the wall socket.



Do not recharge the shaver in a closed pouch.

- 2 If you charge the shaver for the first time or after a long period of disuse, leave it to charge for at least 2.5 hours. Then use the shaver until the battery is empty and charge the appliance again for at least 2.5 hours. In all other cases, the standard charging time is 1 hour.

A fully charged shaver has a cordless shaving time of up to 100 minutes.

- To extend the lifetime of the battery, remove the powerplug from the wall socket and pull the appliance plug out of the shaver when the battery has been fully charged.

Shaving

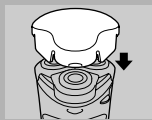

- ▶ The Personal Comfort Control adapts the shaver to your skin type.
 - 'Normal' for a fast and comfortable close shave.
 - 'Sensitive' for a comfortable close shave with optimal skin comfort.

- ▶ The ◀▶ position is a neutral position.

- ▶ The 'S' position is best suited for a sensitive skin.

- ▶ The 'N' position is best suited for a normal skin.

- Switch the shaver on by pressing the on/off button once.


- Move the shaving heads quickly over your skin, making both straight and circular movements.

Shaving on a dry face gives the best results. Your skin may need 2 or 3 weeks to get accustomed to the Philishave system.

- Switch the shaver off.

- Put the protection cap on the shaver to prevent damage.

Trimming

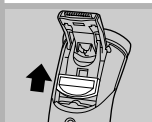

For grooming sideburns and moustache.

- Open the trimmer by pushing the slide upwards. The trimmer can be activated while the motor is running.

Cleaning

Regular cleaning guarantees better shaving performance.


The easiest and most hygienic way to clean the appliance is to rinse the shaving unit and the hair chamber every day with hot water (60°C-80°C).

When you clean the appliance, it is not necessary to take the shaving heads (cutters and guards) apart. If you want to take them apart, be sure not to mix up the cutters and guards, since grinding of the cutters in the guards only guarantees optimal performance for each matching set. If you accidentally mix up the sets, it could take several weeks before optimal shaving performance is restored.


Every week: shaving unit and hair chamber



1 Switch the shaver off, remove the powerplug from the wall socket and pull the appliance plug out of the shaver.



2 Press the release button and open the shaving unit.




3 Clean the shaving unit and the hair chamber by rinsing them under a hot tap for some time.

Make sure the inside of the shaving unit and the hair chamber have been cleaned properly.

4 Leave the shaving unit open to let the appliance dry completely.

► You can also clean the shaving unit and hair chamber without water by using the brush supplied.

Every six months: trimmer



- 1 Switch the shaver off, remove the powerplug from the wall socket and pull the appliance plug out of the shaver.
- 2 Clean the trimmer with brush.


Replacing the shaving heads



- 1 Switch the shaver off, remove the powerplug from the socket and pull the appliance plug out of the shaver.
- 2 Press the release button to open the shaving unit.




- 3 Turn the wheel anti-clockwise and remove the retaining frame.

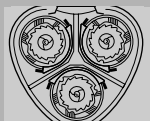

- 4 Remove the shaving heads and place the new ones in the shaving unit in such a way that the parts with the small holes point towards the centre of the shaving unit.


Make sure that the projections of the shaving heads fit exactly into the recesses.




- 5 Reassemble the shaving unit by replacing the retaining frame. Press the wheel and turn it clockwise.

Replace damaged or worn shaving heads with Philishave HQ8 Sensotec shaving heads only.

Storing



- ▶ Put the protective cap on the shaver to prevent damage.



- ▶ Store the appliance in the luxury pouch or place the appliance in the stand to dry.


Disposal of the battery

The built-in rechargeable batteries contain substances that may pollute the environment.

Remove the battery when you discard the appliance. Do not throw the battery away with the normal household waste, but hand it in at an official collection point.

Only remove the battery if it is completely empty.

- 1** Remove the mains plug from the socket and pull the appliance plug out of the shaver.
- 2** Let the shaver run until it stops, undo the screws and open the shaver.
- 3** Remove the battery.



Do not connect the shaver to the mains again after the battery has been removed.

Troubleshooting

- 1** **Reduced shaving performance**
 - ▶ *Cause 1: the shaving heads are dirty.*
 - ▶ *The shaver has not been rinsed long enough or the water used was not hot enough.*
- ▶ **Clean the shaver thoroughly before you continue shaving (see 'Cleaning').**



- ▶ *Cause 2: long hairs are obstructing the shaving heads.*
 - ▶ **Clean the cutters and guards.**
 - ▶ **Remove the retaining plate. Do not clean more than one cutter and guard at a time, since they are all matching sets. If you accidentally mix up the cutters and guards, it may take several weeks before optimal shaving performance is restored.**
 - ▶ **Remove the hairs with the brush supplied.**
 - ▶ **Put the retaining plate back onto the shaving unit.**
 - ▶ *Cause 3: shaving heads are damaged or worn.*
 - ▶ **Remove the retaining frame.**
 - ▶ **Remove the old shaving heads from the shaving unit and replace them with new ones**
- Damaged or worn shaving heads (cutters and guards) must only be replaced with the original Philipsave HQ8 Sensotec shaving heads.
- ▶ **Put the retaining plate back onto the shaving unit.**

2 The shaver does not work when the ON/OFF button is pressed

- ▶ *Cause: the battery is empty.*
- ▶ **Recharge the battery.**

3 Scale on the metal housing of the appliance

- ▶ *Cause: after cleaning, water remains on the metal parts of the appliance.*
- ▶ **To prevent the forming of scale on the metal parts of the appliance, wipe the shaver dry with a towel or tissue after rinsing.**

Do not wipe the shaving unit with a towel or a tissue. This could damage the shaving heads.

- ▶ **If nevertheless the scale is persistent, it will be easily removed by using some descaler. Rub in the metal parts with the descaler, let it interact for a while and wipe dry.**

4 In case of other problems:

- ▶ **See 'Information & service'.**

保証書と修理サービスについて (必ずお読みください)

保証と アフターサービス

〈保証書・最終ページに付属〉

- 保証書は、必ず「お買い上げ日・販売店名」等の記入をお確かめのうえ、販売店から受け取っていただき内容をよくお読みのあと大切に保管してください。

保証期間……お買い上げ日から2年間

【補修用性能部品の最低保有期間】

- 補修用性能部品の最低保有期間は製造打ち切り後6年です。
- 性能部品とは、その製品の機能を維持するために必要な部品です。

【ご不明な点や修理に関するご相談は】

- 修理に関するご相談ならびにご不明な点は、お買い上げの販売店または、お客様情報センターにお問い合わせください。

【修理を依頼されるときは】

- 修理をご依頼されるまえに、この取扱説明書をよくお読みいただき、再度点検のうえ、尚、異常のあるときはご使用を中止し、お買い上げの販売店へご依頼ください。

【保証期間中は】

- 修理に際しましては保証書をご提示ください。
- 保証書の規定に従って販売店が修理させていただきます。

【保証期間が過ぎているときは】

- 修理によって商品の機能が維持できる場合は、ご希望により有料で修理させていただきます。

【海外での本製品の保証及びアフターサービスについて】

- 本製品の保証は海外においても有効です。
- 日本国以外のフィリップスサービス部門においても保証期間内及び保証期間の経過後のアフターサービスを受けることができますが、この場合多少日数を要することもあります。
- 海外にてアフターサービスを受けられる場合は、現地の弊社サービス部門にお問い合わせください。尚、お困りの点がございましたら下記までご連絡ください。

Philips Domestic Appliance
and Personal Care B.V.
Service Department
P.O.Box 20100, 9200 CA DRACHTEN
The Netherlands Fax:+31 512 594316

お買い上げ日	年 月 日	お買い上げ店名	TEL. ()
--------	-------	---------	----------

ご使用の時このような症状はありませんか？

- 本体にさわると時々電気を感じる。
- こげくさい臭いがする。
- 電源コード部を動かすと通電したり、しなかったりする。
- その他の異常、故障がある。

このような症状の時は、故障や事故防止のため、スイッチを切り、充電アダプタをコンセントからはずして、必ず販売店にご相談ください。



仕 様

品 番	HQ8894
電 源 方 式	充電・交流式(専用充電アダプタ使用)
消 費 電 力	6W
定 格 時 間	5分
定 格 電 圧	AC100-240V(50/60Hz)
充電アダプタの電源コードの長さ	1.75m
本 体 質 量	218g
充 電 時 間	1時間
付 属 品	クリーニングブラシ、保護キャップ、革ケース、充電アダプタ、スタンド

- フィリップス製品の修理受付はお買い上げの販売店にお申し出ください。
- 修理サービス等についておわかりにならないことは、下記にお問い合わせください。

フィリップス家電事業部

日本販売総代理店
小泉成器株式会社
〒541-0051 大阪市中央区備後町3-3-7

お客様情報センター(全国共通)

ナビダイヤル.0570(07)6666

ホームページアドレス <http://www.philips.co.jp/>

〈無料修理規定〉

- 1.取扱説明書、本体貼付ラベル等の注意書に従った正常な使用状態で故障した場合には、無料修理します。
- 2.保証期間内に故障して無料修理をお受けになる場合には、商品と本書をご持参、ご提示のうえ、お買い上げの販売店にご依頼ください。
なお、商品を直接メーカーへ送付した場合の送料等はおお客様の負担となります。
- 3.ご転居の場合は事前にお買い上げの販売店にご相談ください。
- 4.ご贈答、ご転居でお買い上げの販売店に修理を依頼できない場合は、フィリップスお客様情報センターにご相談ください。
- 5.保証期間内でも次の場合には有料修理になります。
 - ①使用上の誤り及び不当な修理や改造による故障及び損傷。
 - ②お買い上げ後の輸送、移動、落下等による故障及び損傷。
 - ③火災、地震、水害、落雷、その他の天災地変、公害や異常電圧による故障及び損傷。
 - ④一般家庭以外（例えば、業務用の長時間使用）に使用された場合の故障及び損傷。
 - ⑤本書の提示がない場合。
 - ⑥本書にお買い上げ年月日、お客様名、販売店名の記入のない場合、或は字句を書き換えられた場合。

修理メモ

- *この保証書は、本書に明示した期間、条件のもとにおいて無料修理をお約束するものです。従ってこの保証書によってお客様の法律上の権利を制限するものではありません。保証期間経過後の修理についてご不明の場合は、お買い上げの販売店またはフィリップスお客様情報センターにお問い合わせください。
- *保証期間経過後の修理・補修用性能部品の保有期間について詳しくは取扱説明書をご覧ください。

フィリップスシェーバー保証書 持込修理

CERTIFICATE OF PURCHASE

この保証書は、本書記載内容で無料修理を行うことをお約束するものです。
お買い上げの日から下記期間中に故障が発生した場合は、本書をご提示のうえ、
お買い上げの販売店に修理をご依頼ください。

品名	電動シェーバー
品番	HQ8894
保証期間	お買い上げ日より2年
対象部分	本体（刃を含む）
お買い上げ日	年 月 日
お客様	ご住所 〒
	ご芳名
	電話番号
★販売店	販売店・住所・電話番号

★ご販売店様へ

この保証書はお客様へのアフターサービスの実施と責任を明確にするものです。
贈答品、記念品の場合も含めて必ず記入捺印してお客様にお渡しください。

フィリップス家電事業部

日本販売総代理店
小泉成器株式会社
〒541-0051
大阪市中央区備後町3-3-7

お客様情報センター（全国共通）
ナビダイヤル 0570-07-6666