

フィリップス ヒゲトリマー  
品番 BT3206/14取扱説明書  
保証書付

フィリップス ヒゲトリマーをお買い上げいただき、まことにありがとうございます。長い間お愛用いただくために、ご使用前にこの取扱説明書をよくお読みのうえ、正しくお使いください。また、お読みになった後は、お使いになる方がいつでも見られるところに必ず保管してください。



## △ 注意

- 充電アダプタの電源プラグを抜くときは、電源コード部を持たずに必ず先端の充電アダプタ部を持って引き抜いてください。感電やショートで火災などの原因になります。
- 充電アダプタは水や液体の中に入れないでください。故障の原因となります。
- 充電アダプタは付属の充電アダプタを使用してください。また付属の充電アダプタでの商品をお買入しないでください。ケガや火災、絶縁劣化による感電・感電・火災の原因となります。
- 刃は強く押さないでください。破損して皮膚を傷つけることがあります。
- 刃やコームなどの部品が破損または故障した場合は、本製品を使用しないでください。刃の原因になります。交換の際には必ずフィリップス社製の同型品をご取扱ください。
- 充電コネクタ受部にビニールを付着させないでください。感電・ショート・火災の原因になります。
- 本製品を浴室やシャワー中に使用しないでください。感電することがあります。

## 使用上の注意

- 1 本体は水洗いでできません。水や液体の中に浸けないようご注意ください。また水ですすぎないでください。
- 2 本製品は、ヒゲ、もみあげ、寝たきりのカット専用です。それ以外の目的で使用しないでください。
- 3 本製品の使用、充電、保管は室温5°C~35°Cの環境下で行ってください。(冷蔵庫や高温で充電すると、充電池の寿命が短くなります)。
- 4 刃の清掃やコームの蓄毛は必ず電源をOFFにしてから行ってください。
- 5 刃は、薄く仕上げていますので、刃部を強く押したり、硬いものに当たらないよう、ていねいに扱ってください。
- 6 直射日光の当たる場所には保管しないでください。夏場、車の中に放置しないでください。
- 7 乳幼児の手の届かないところに保管してください。
- 8 本製品は、使用の都度、掃除をしてください。
- 9 衛生上、他の人は共有しないでください。
- 10 ブラシ式道具・芳香剤を使用しているコンセントあるいはその近くのコンセントに充電アダプタを接続しないでください。充電アダプタを傷める原因となります。

## 目次

- ① 必ずお守りください
- ② 各部の名称
- ③ 充電の仕方
- ④ 基本的な使い方
- ⑤ トリミングの仕方
- ⑥ 無精ヒゲを作る／ごく短くカットする
- ⑦ お手入れ方法
- ⑧ 刃の交換
- ⑨ 製品を廃棄するとき
- ⑩ 故障かな?と思ったら
- ⑪ 保証とアフターサービス
- ⑫ 仕様
- ⑬ 無料修理規定
- Guidance in English

© 2018 Philips Japan, Ltd.  
4222.002.8959.1(05/18)

## ① 必ずお守りください

## 安全上の注意

- ここに示した注意事項は、安全に関する重要な内容ですので、必ず守ってください。
- 誤った取扱いをしたときに想定される内容を「警告」と「注意」とに分けています。

## ○絵表示について

- 記号は、「警告」、「注意」を示します。  
図の中や近くに具体的な注意内容を示します。
- 警告** 人が死亡または重傷を負う可能性が想定される内容。
- 注意** 人が傷害を負う可能性及び物的損害の発生が想定される内容。

## ○絵表示の例

- 記号は、してはいけない「禁止」を示します。図の中や近くに具体的な禁止内容(左図の場合は分解禁止)を示します。
- 記号は、必ずしていただく「強制」を示します。図の中や近くに具体的な強制内容(左図の場合は電源プラグをコンセントから抜くことを示します)。

## ★ 製品に関するお問い合わせ

## △ 警告

- 本体ならびに充電アダプタは改造しないでください。また、分解したり修理をしないでください。火災、感電、ケガの原因となります。修理はお買い上げの販売店または小泉成器修理センターにご相談ください。
- お手入れの際は必ず充電アダプタの電源プラグ部をコンセントから抜いてください。また、濡れた手で抜き差ししないでください。感電やショートがあります。
- 充電アダプタが傷つけたり、コンセントの端子が緩いときは使用しないでください。感電や火災の原因になります。
- 本体、充電アダプタを水につけてください。水をかけたしないでください。故障や、ショート・感電の原因になります。
- 充電アダプタを傷付けたり、電源コードを無理に曲げたり、引っ張ったり、ねじったり、たねたり、重い物を載せたり、挟みこんだり、加工したりしないでください。電源コードが破損し、火災、感電の原因になります。
- 乳幼児の手の届くところに本製品を置かないでください。
- 充電アダプタは変圧器等が内蔵されています。充電アダプタを切り離して別のプラグに接続する時は危険ですのでやめください。
- 自分で意思表示ができるない人(幼児を含む)に使用しないでください。また、お体の不自由な人だけでは使用しないでください。

- ポイント**  
●電源中、テレビ等に音楽がある場合、別のコンセントで充電してください。  
●電源中、充電アダプタが多忙な時は、異常にではありません。  
●電池の寿命を延ばすため、保管等の際に電池を抜いておいたままにしてください。
- 注意**  
●充電アダプタは完全に充電が完了しても充電アダプタの表示ランプが点滅します。表示ランプの色は変わらず、点滅しません(充電完了表示はありません)。

- ご足元に充電アダプタの通電が妨げられます。  
●充電アダプタが他の電気製品と一緒に充電する時は危険ですのでやめください。

- 自分で意思表示ができるない人(幼児を含む)に使用しないでください。

- 本製品はお風呂で使用しないでください。

- 充電アダプタは浴室で使用しないでください。

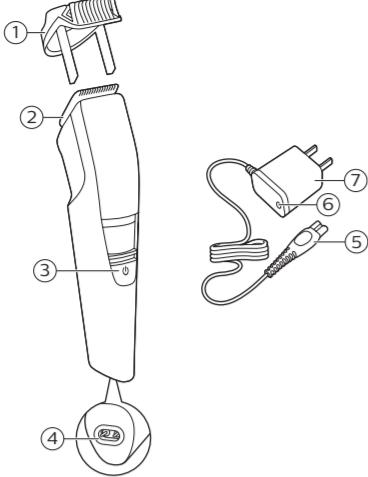
- 定期的に使用しない場合は、充電アダプタを温めてしまうと使

- 用可能時間が短くなることがあります。この避ける為、最後まで充電を使

- いきながら、充電することをお勧めします。

- 充電アダプタは浴室で充電しないでください。

- 充電アダプタは浴室で充電

**Optimizing the lifetime of the rechargeable battery**

When you have charged the appliance for the first time, we advise you to use it until the battery is completely empty. Continue to use the appliance until the motor almost stops running during a session. Then recharge the battery. Follow this procedure at least twice a year.

- Slide the on/off button up to switch the product on or off (Fig. 3).

**Using the appliance**

Note: Switch off and clean the appliance after each use.

Always comb the beard and/or moustache with a fine comb before you start trimming.

**Be careful when you trim for the first time. Do not move the trimmer too fast. Make smooth and gentle movements.**

**Trimming with comb**

Note: When you trim for the first time, start at the highest length setting to familiarize yourself with the appliance.

Use the trimming comb attached to the cutting element to trim your beard and moustache in your preferred style. Turn the zoom wheel to choose from 11 length settings ranging from 0.5mm to 10mm (1/32in. to 13/32in.).

- 1 Slide the trimming comb straight into the guiding groove of the appliance (Fig. 4).

- 2 Turn the zoom wheel to the desired setting (Fig. 5). The desired hair length setting is shown in the center of the zoom wheel.

- 3 Switch the appliance on.

- 4 To trim most effectively, move the appliance against the hair growth direction. Make sure that the surface of the comb always stays in contact with the skin.

Note: Since all hairs do not grow in the same direction, you may want to try different trimming positions (i.e., upwards, downwards, or across). Practice is best for optimum results.

- 5 Regularly remove cut hair from the comb. If a lot of hair has accumulated in the comb, remove it from the appliance and blow and/or shake out the hair (Fig. 6). The selected hair length setting does not change when the comb is removed.

- 6 Switch off and clean the product after each use (see 'Cleaning').

**Trimming for 'stubble look'**

- 1 Be certain trimming comb is attached to the appliance and use setting 0.5mm (1/32in.) to create a 'stubble look' trim (Fig. 7).

**Trimming without comb**

Use the trimmer without the trimming comb to trim the edges and single hairs.

**Be careful when you trim without the comb as the cutting unit will remove every hair it touches.**

- 1 Pull the trimming guard straight off the appliance (Fig. 9).

- 2 Switch the appliance on.

- 3 Make well-controlled movements. Touch the hair lightly with the trimmer (Fig. 8).

**Cleaning**

Never use scouring pads, abrasive cleaning agents or aggressive liquids such as gasoline or acetone to clean the product.

Never dry the trimmer teeth with a towel or tissue, as this may damage the trimmer teeth.

**Caution:** Never use scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.

- 1 Switch off the appliance and disconnect it from the power outlet.

- 2 Wipe the housing of the appliance with a dry cloth.

**Caution:** Never immerse the appliance in water, or rinse it under the tap. Only the cutting unit can be rinsed under the tap.

- 3 Remove the comb (Fig. 9) and clean it with the cleaning brush and/or rinse it under the tap.

- 4 Remove the cutting unit by pushing against the teeth of the cutting unit (Fig. 10) and clean it with the brush or rinse it under the tap.

- 5 Carefully shake off excess water and let air dry completely.

- 6 Insert the lug of the cutting unit into the guiding slot and push the cutting unit back onto the appliance (Fig. 11).

**Ordering accessories**

To buy accessories or spare parts, visit [www.shop.philips.com/service](http://www.shop.philips.com/service) or go to your Philips dealer. You can also contact the Philips Consumer Care Center in your country (see the international warranty leaflet for contact details).

**Recycling**

- Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

- This product contains a built-in rechargeable battery which shall not be disposed of with normal household waste. We strongly advise you to take your product to an official collection point or a Philips service centre to have a professional remove the rechargeable battery.

- Follow your country's rules for the separate collection of electrical and electronic products and rechargeable batteries. Correct disposal helps prevent negative consequences for the environment and human health.

**Removing the rechargeable battery**

Only remove the rechargeable battery when you discard the product. Before you remove the battery, make sure that the product is disconnected from the wall socket and that the battery is completely empty.

**Take any necessary safety precautions when you handle tools to open the product and when you dispose of the rechargeable battery.**

- 1 Take the comb and the cutting element from the handle and remove the on/off slide by using a flathead screwdriver (Fig. 12).

- 2 Remove the axe by pushing it upwards (Fig. 13).

- 3 Remove two screws from the top of the appliance (Fig. 14).

- 4 Remove one screw above the zoom wheel (Fig. 15).

- 5 Remove one screw on the bottom of the appliance (Fig. 16).

- 6 Remove the front shell with a flathead screwdriver, by placing the screwdriver on the bottom of the appliance and twisting the screwdriver up and down until it comes loose (Fig. 17).

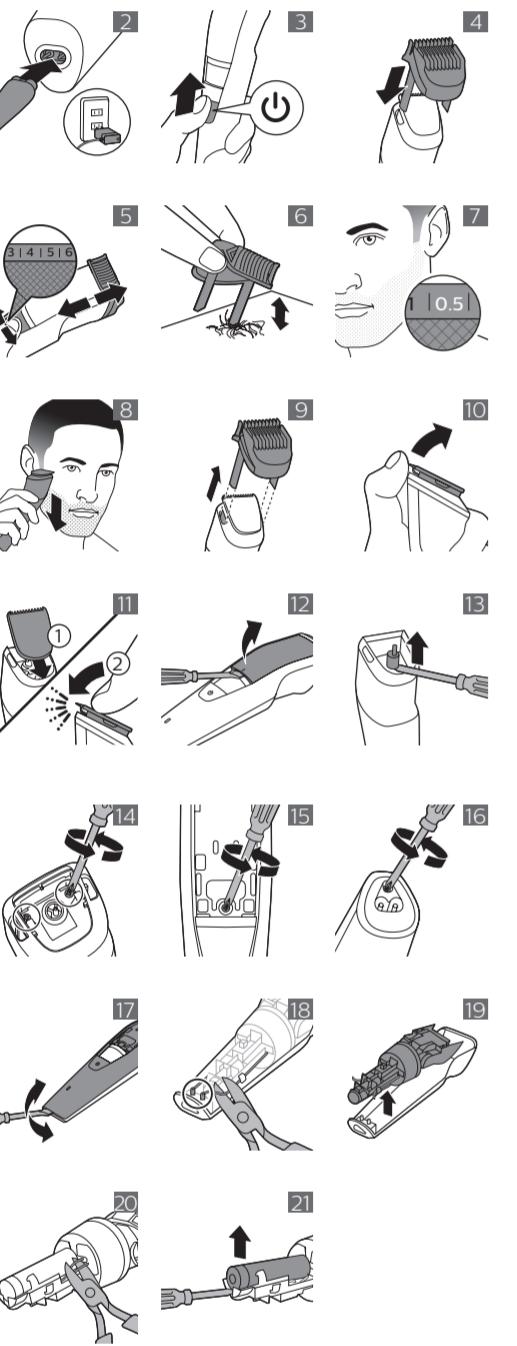
- 7 Cut both wires in the bottom (Fig. 18) and take out the internal structure (Fig. 19).

- 8 Cut the battery wire with a cutter (Fig. 20) and remove the battery (Fig. 21).

**Warning: The battery tags can be very sharp.**

**Warranty and support**

If you need information or support, please visit [www.philips.com/support](http://www.philips.com/support) or read the international warranty leaflet.

**Introduction**

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

**General description (fig. 1)**

- 1 Trimming guard
- 2 Cutting unit
- 3 On/off button
- 4 Socket for small plug
- 5 Small plug
- 6 Battery charge indicator
- 7 Supply unit
- not shown: cleaning brush

**Important safety information**

Read this important information carefully before you use the appliance and its accessories and save it for future reference. The accessories supplied may vary for different products.

**Danger**

- Keep the supply unit dry.

**Warning**

- To charge the battery, only use the detachable supply unit (A00390) provided with the appliance.
- The supply unit contains a transformer. Do not cut off the supply unit to replace it with another plug, as this causes a hazardous situation.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.
- Do not open the appliance to replace the rechargeable battery.

**Caution**

- This appliance is not washable. Never immerse the appliance in water and do not rinse it under the tap.
- Only use this appliance for its intended purpose as shown in the user manual.
- For hygienic reasons, the appliance should only be used by one person.
- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.
- Do not use the supply unit in or near wall sockets that contain an electric air freshener to prevent irreparable damage to the supply unit.

**Electromagnetic fields (EMF)**

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

**General**

- The supply unit is suitable for mains voltages ranging from 100 to 240 volts.
- The supply unit transforms 100-240 volts to a safe low voltage of less than 24 volts.

**Charging**

Charge the appliance fully before you use it for the first time and after a long period of disuse.

It takes approximately 10 hours to fully charge the appliance. When it is fully charged, the appliance has a cordless operating time of up to 45 minutes.

- 1 Make sure the appliance is switched off.
- 2 Insert the small plug into the appliance (Fig. 2).
- 3 Put the supply unit in the wall socket.
- The charging light on the supply unit lights up green to indicate that the product is charging.

Note: The charging light on the supply unit does not change color and does not go out when the product is fully charged.

- 4 After charging, remove the supply unit from the wall socket and pull the small plug out of the appliance.