

PHILIPS

Shaver



フィリップス 電動シェーバー

品番 **S1085/04**




取扱説明書

保証書付

保証書は、この取扱説明書の表紙の裏面についてありますので電光紙で記入を受けてください。

商品のご確認

商品をご確認ください。

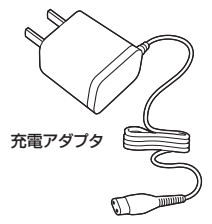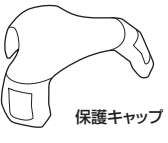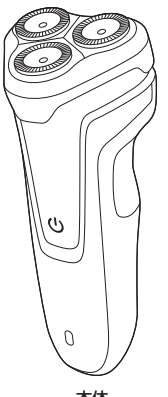

本体

保護キャップ

充電アダプタ

※改良の為、仕様を予告なく変更することがあります。

お買い上げのお客様へ 初めてご使用になる際は、ご使用前に充電してください。

目 次

- 必ずお守りください
- 各部の名称
- 充電の仕方
- シェービングの仕方(ドライ)
- シェービングの仕方(ウェット)
- トリマーの使い方
- お手入れ方法
- 分解掃除の仕方
- 保護キャップの取り付け方
- 刃の交換
- シェーバーを廃棄するとき
- 故障かな?と思ったら
- 保証とアフターサービス
- 仕様
- 無料修理規定

Guidance in English

① 必ずお守りください

安全上のご注意

- ここに示した注意事項は、安全に関する重要な内容ですので、必ず守ってください。
- 誤った取扱いをしたときに想定される内容を「警告」と「注意」とに区別しています。

○絵表示について

- ⚠ 記号は、「警告、注意」を示します。図の中や近くに具体的な禁止内容(左図の場合は分解禁止)を示します。

- ⚠ 警告 人が死亡または重傷を負う可能性が想定される内容。
- ⚠ 注意 人が傷害を負う可能性及び物的損害の発生が想定される内容。

○絵表示の例

- ⚡ 記号は、してはいけない「禁止」を示します。図の中や近くに具体的な禁止内容(左図の場合は分解禁止)を示します。
- 🔌 記号は、必ずしていただく「強制」を示します。図の中や近くに具体的な強制内容(左図の場合は電源プラグをコンセントから抜くこと)を示します。

⚠ 警 告

- ⚡ ●シェーバー本体・充電アダプタは改造しないでください。また、修理技術者以外の人には、分解したりの修理をしないでください。火災、感電、ケガの原因となります。修理はお買い上げの販売店または小泉成器修理センターにご相談ください。
- 🔌 ●充電時以外は、充電アダプタの電源プラグをコンセントから抜いてください。また、濡れた手で抜き差ししないでください。感電やケガをすることがあります。
- 🔌 ●充電アダプタが傷んだり、コンセントの差込みが緩いときは使用しないでください。感電・ショート・発火の原因になります。
- 🔌 ●充電アダプタを水につけたり、水をかいたししないでください。故障や、ショート・感電の原因になります。
- 🔌 ●充電アダプタを電付けたり、電源コードを無理に曲げたり、引っ張ったり、ねじったり、たばねたり、重い物を載せたり、挟み込んだり、加工したしないでください。電源コードが破損し、火災・感電の原因となります。
- 🔌 ●乳幼児の手の届くところに本製品を置かないでください。
- 🔌 ●充電アダプタには変圧器が内蔵されています。充電アダプタを切り離した状態で別のプラグに接続する場合は危険ですのでおやめください。
- 🔌 ●自分で意思表示ができない人(幼児を含む)に使用させないでください。また、お体の不自由な人だけでは使用しないでください。



⚠ 注 意

- ⚡ ●充電アダプタの電源プラグを抜きときは、電源コードを持たずには必ず先端の充電アダプタ部を持って引き抜いてください。ケガややけど、絶縁劣化による感電・漏電・火災の原因となります。
- ⚡ ●刃が破損または故障した場合は、本製品を使用しないでください。ケガの原因になります。交換の際には必ずフィリップス社製の同等品部と取り替えてください。
- 🔌 ●電源コネクタ受部にピンやごみを付着させないでください。感電・ショート・発火の原因になります。
- 🔌 ●刃は強く押さえないでください。破損して皮膚を傷つけることがあります。
- 🔌 ●充電アダプタは付属の専用アダプタを使用してください。また付属の専用アダプタで他の商品を充電しないでください。ショート、異常発熱による発火の原因になります。破損、故障した場合は、事故を避けるために必ずフィリップス社製の同等充電アダプタをお求めください。

使用上のご注意

1. 本製品はヒゲ(あこび、ロビハ)をシェービングするためのものです。それ以外の目的で使用しないでください。
2. フィリップスシェーバーを初めてお使いの方は、剃り方に慣れるまで2〜3週間かかることがあります。
3. 60℃以上の水でシェーバーを洗浄しないでください。
4. 本製品の使用、充電、保管は室温5℃〜35℃の環境で行ってください(高温・低温や高温で充電すると、充電寿命の短縮があります)。
5. 外刃は、濡く仕上げておきますので、刃端を強く押さたり、緩いものに当てないよう、注意に役立ってください。
6. シェービングユニットの清掃や磨きは、必ず電源をOFFにしてから行ってください。
7. 切れ味が落ちてきたり、刃が破損した場合は、使用せず必ず新しい刃と交換してください。
8. 直射日光の当たる場所には保管しないでください。夏場、車の中に放置しないでください。
9. 乳幼児の手の届かないところに保管してください。
10. シェーバー本体は防水加工しておりますが、水や液体の中に入れてください。
11. プラグ式消臭・芳香剤を使用しているコンセント、あるいはその近くのコンセントに充電アダプタを接続しないでください。充電アダプタを傷める原因となります。

② 各部の名称

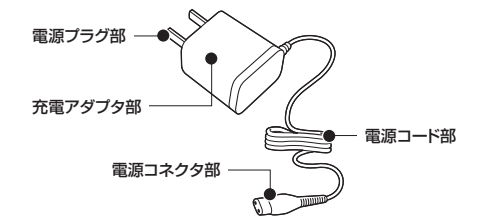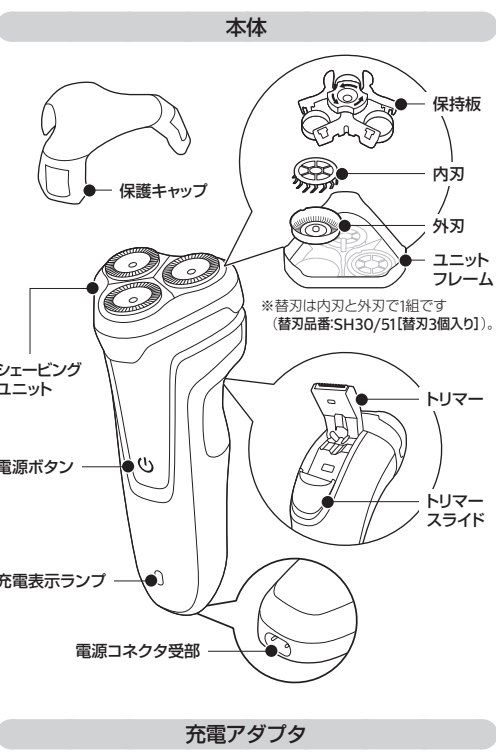


③ 充電の仕方

浴室で充電をしないでください。
お客様による充電電池の交換はできません。
この商品は通常約10時間充電です。
満充電で約45分使用できます。

※充電をしながらシェービングはできません。

初めてお使いになるときや、長い間ご使用にならなかったときは、ご使用前に充電してください。充電時間は約10時間です。海外(100〜240V)でのご使用も可能です。ただし、コンセントの形状や電圧など視覚で充分お確かめのうえご使用ください。

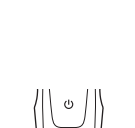1. シェーバー本体の電源がOFFになっていることを確認してください。
2. 充電アダプタの電源コネクタ部をシェーバー本体の電源コネクタ受部に差し込みます。
3. ご家庭のコンセントに充電アダプタの電源プラグ部を差し込みます。
※通常の目安として満充電で1日3分使用し、約15日前使用できますが、ご使用状況(使用時間・ヒゲの濃さなど)により変わります。
4. 充電表示ランプが白色に点灯し、充電中であることを示します。
※充電が完了しても充電表示ランプは点灯し続けます。表示ランプの色は変わらず、点滅しませんが。
※充電完了後約10時間を目安に充電アダプタははずしてください。

- ポイント●充電中、テレビ等に雑音が入る場合、別のコンセントで充電してください。
- 充電中は、充電アダプタが多少熱くなりますが、異常ではありません。
- 充電電池の寿命は使用・保管などの状態により異なります。
- ニッケル水素電池の特性上、電池容量を使い切らずに充電を繰り返すと使用可能時間が減少することがあります。3〜4月に一度は充電してください。
- 本製品を2時間以上コンセントに接続したままにしないでください。

- ⚠ 注意 ●必ず定し充電を行うと充電電池の寿命が短くなります。
- 専用の充電アダプタ以外での充電はしないでください。
- 長期使用しない場合は、充電電池が過放電や過充電して使えなくなる場合があります。3〜4月に一度は充電してください。
- 本製品を2時間以上コンセントに接続したままにしないでください。

④ シェービングの仕方(ドライ)

製品本体に充電アダプタを差したまま使用はできません。

肌が乾いた状態でのシェービングの仕方です。

- ⚠ 警告 シェーバー本体は防水加工をしており、浴室でも使用できますが、水や液体の中に入れてはいけません。故障の原因となります。


- モーターの始動時、微弱的な振動がシェーバー本体に伝わりますが、問題はありません。
- ほこりなどで肌が荒れている場合、ふきとってからご使用ください。
- ご使用の前に刃の破れや変形がないか確認してください。(刃先に破れや変形があると肌を傷つける原因になります)。
- ヒゲ剃りの以外の目的(髭剃りなど)には、使用しないでください。

1 電源ボタンを押し、電源をONにします。

2. 刃を前に軽く押あてて、円を描くように動かしながら剃ります。

3 シェービング後は電源ボタンを押し、電源をOFFにします。


- 上手に剃るには 肌に強く押しつけるのではなく、軽く押あてて円を描くように回転させながら剃るのがコツです。

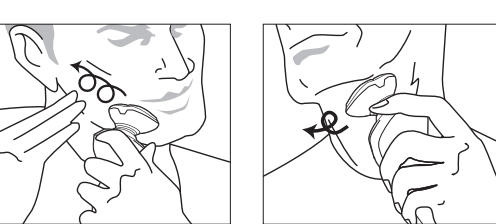

ほお 肌を伸ばし、ヒゲを立たせるように円を描くように小さく回転させながら剃ります。



ほおの奥から首筋 手の手で肌を後ろに引っ張りながら剃ります。

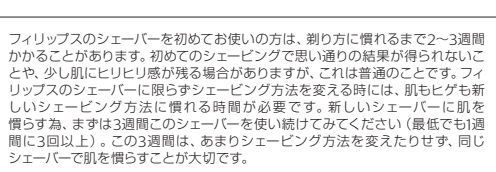

フィリップスのシェーバーを初めてお使いの方は、剃り方に慣れるまで2〜3週間かかることがあります。初めてシェービングで思い通りの結果が得られないことや、少し剃りにくいと感じる場合がありますが、これは普通のことです。フィリップスのシェーバーに慣らすシェービング方法を覚える際には、最初ヒゲを剃いしシェービング方法に慣れる時間が必要です。新しいシェーバーに肌を慣らす為、まずは3週間このシェーバーを使い続けてみてください。(最低でも週間に2回以上)。この3週間後、あまりシェービング方法を覚えたりせず、同じシェーバーで肌を慣らすことが大切です。

⑤ シェービングの仕方(ウェット)

シェービングフォームやシェービングジェルを使ったシェービングの仕方です。剃った部分を乾燥しなから、ぬめりなシェービングができます。

- ⚠ 警告 シェーバー本体は防水加工をしており、浴室でも使用できますが、水や液体の中に入れてはいけません。故障の原因となります。

- モーターの始動時、微弱的な振動がシェーバー本体に伝わりますが、問題はありません。
- ご使用の前に刃の破れや変形がないか確認してください。(刃先に破れや変形があると肌を傷つける原因になります)。
- ヒゲ剃りの以外の目的(髭剃りなど)には、使用しないでください。
- 剃り方もお使いいただけますが、刃の上での滑りやすいため、シェービングフォームやジェルの使用をお勧めします。

1. 顔を濡らし、市販のシェービングフォームまたはシェービングジェルを付けます。

2. シェービングユニットを水で濡らし、肌の上でぬめりかたに動くようにします。

3. 電源ボタンを押し、電源をONにします。

4. 刃を前に軽く押あてて、円を描くように動かしながら剃ります。シェービングフォームやシェービングジェルにより、鏡を見た時剃った部分を確認しやすくなります。
※途中、よりぬめりかにシェービングするために、シェービングユニットを水で濡らすと効果的です。

5. シェーバー後は電源ボタンを押し、電源をOFFにします。

6 シェーバーをきれいに洗います。

- 【重要】シェービング後は、シェービングフォームやシェービングジェルがしっかりと洗い流されているかを確認してください。お手入れが不十分な場合、臭いが出るばかりでなく、故障の原因にもなります。

⑥ トリマーの使い方

トリマーはベアライン、もみあげ、ヒゲなどを整えるのに便利です。※トリマーは使用後必ずお手入れしてください。

1. トリマースライドを下方向に押し、トリマーを開きます。電源をONにする、トリマーの先端の刃が復旧してカットします。

2. 鏡を見ながらトリマーをカットしたいところに直角にあたるようにしてください。一度に切らずに、少しずつカットしてください。

3. ご使用ごとに必ず電源をOFFにし、トリマーをめぐるま漏または水ですすいでください。その後トリマーの余分な水分を切り、よく乾かします。

4. トリマーを元の位置に戻します。

- ⚠ 注意 あまり押しあて過ぎると肌が痛めますのでご注意ください。

⑦ お手入れ方法

シェービングユニットはご使用の頻度、水洗いによるお手入れをしてください。

水洗いによるお手入れ方法


- お手入れの際は、電源をOFFにしてから水洗いしてください。
- シェービングユニットは水洗いできますが、本体は水中に浸けないでください。
- シェービングユニットを乾燥させる時に、タオルやティッシュペーパーを使用しないでください。刃を傷める場合があります。

※洗剤は使用しないでください。
※ぬるま湯(40℃前後)でのお手入れをおすすめします。熱いものもとる皮膚や汗などを取れやすくなります。ただし、熱湯はおめください。故障の原因となります。
※お手入れ中にシェーバーの底から水が漏れる場合がありますが、異常ではありません。

シェービングユニットのお手入れ方法

1. シェービングユニットの前面を上を持ち上げてから背面部を上を持ち上げると、本体からシェービングユニットを取り出すことができます。

2. シェービングユニット受部、シェービングユニットの表と裏を、ぬるま漏または水ですすいでください。

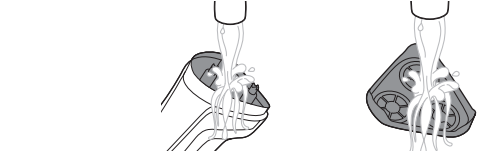

3. シェービングユニットの余分な水分を切り、よく乾かします。


4. 乾いたことを確認したら、シェービングユニットを開いてください。


⑧ 分解掃除の仕方

- 分解掃除は約1月に1回が目安です。
- 分解掃除する場合は、内刃と外刃の組み合わせを変えないようにご注意ください。組み合わせが変わると、刃の状態が元通りになるまで数週間かかる場合があります。


刃の取り外し方

1. シェービングユニットの前面を上を持ち上げてから背面部を上を持ち上げ、本体からシェービングユニットを取り外します。

2. 保持板の中央のつまみを矢印の方向(反時計回り)に回し(図①)、上に持ち上げて取り外します(図②)。内刃と外刃を1組ずつユニットフレームより取り外します。

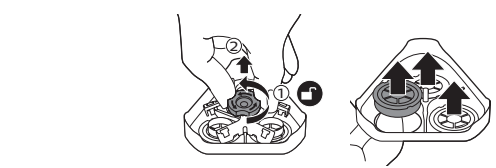


3. 取り外した内刃と外刃を1つずつぬるま漏または水ですすぎます。

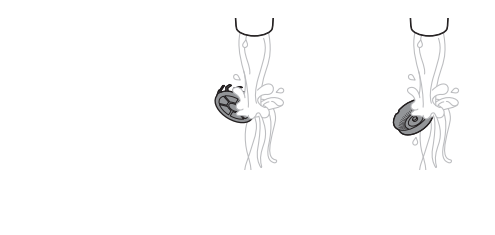

刃の取り付け方


1. 内刃と外刃を正しい組み合わせにセットし、ユニットフレームに戻します。保持板をユニットフレームに戻し(図①)、時計回りに回してセットします(図②)。

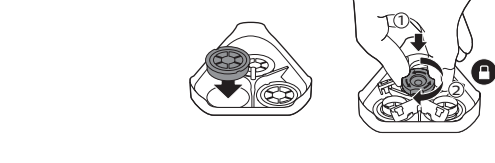

2. シェービングユニットの前面のフックをシェービングユニット受部に引っかけて、カチッと音がするまで押し込みます。

⑨ 保護キャップの取り付け方


保護キャップを取り付ける前にシェーバーをきちんと乾燥させてください。

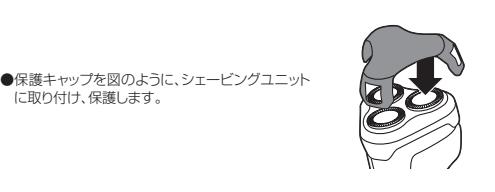



- 保護キャップを図のように、シェービングユニットに取り付け、保護します。


⑩ 刃の交換


専用の替え刃品番はSH30/SIです。

1. シェービングユニットの前面を上を持ち上げてから背面部を上を持ち上げ、本体からシェービングユニットを取り外します。

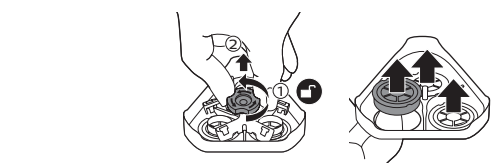

3. 新しい内刃と外刃を正しい組み合わせにセットします。外刃の突起部分をユニットフレームの切り込み部分に合わせ戻します。

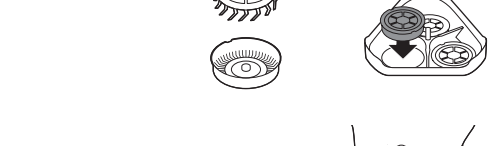

4. 保持板をユニットフレームに戻し(図①)、時計回りに回してセットします(図②)。

5. シェービングユニットの前面のフックをシェービングユニット受部に引っかけて、カチッと音がするまで押し込みます。
※シェービングユニットが正しくセットされている場合、保持板のロックされない場合は、シェービングユニットがきちんと密着します。

6. シェービングユニットの裏面を、ぬるま漏または水ですすいでください。

7. シェービングユニットの裏面を、ぬるま漏または水ですすいでください。

8. シェービングユニットの裏面を、ぬるま漏または水ですすいでください。

9. シェービングユニットの裏面を、ぬるま漏または水ですすいでください。

10. シェービングユニットの裏面を、ぬるま漏または水ですすいでください。


11. シェービングユニットの裏面を、ぬるま漏または水ですすいでください。

- ⚠ 注意 ●製品を廃棄するとき以外は、絶対に本体を分解しないでください。
- 本体内部の金具は鋭いので、ご注意ください。


充電電池の取り外し方

電源をONにして、完全に動作しなくなるまで充電電池を放電させてから、行ってください。

1. ドライバーを使いシェービングユニット受部のねじ2本と、本体背面のねじ1本を外し、背面カバーを取り外します。

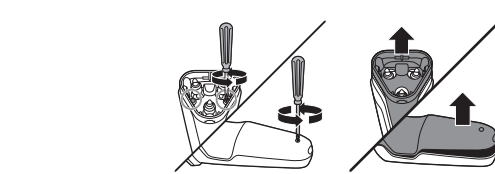

2. モーターユニットにある左右のツメを外し、カバーを取り外します。

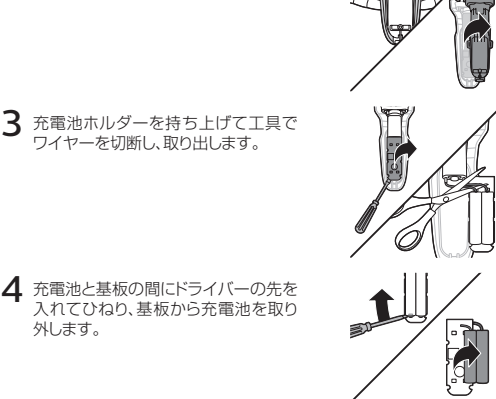

3. 充電電池ホルダーを持ち上げて工具でワイヤーを切断し、取り除きます。

4. 充電電池と基板の間にドライバーの先を入れてひねり、基板から充電電池を取り外します。

※充電電池を取り外した後は、通電しないでください。
※ショートしないように充電電池の端子をテープで覆ってください。

⑫ 故障かな?と思ったら

故障かな?と思ったら、お調べください。

- だんだん切れ味が悪くなった
- ▶シェービングユニットが汚れていませんか?
- ▶刃が損傷または摩耗していませんか?
- ※損傷または摩耗しているときは、刃を交換してください。(替え刃品番: SH30/SI)
- ▶シェービングユニットに長いヒゲがからまっていませんか?

充電しても使用時間が極端に短い

- ▶シェーバーが完全に止まるまで動作させてから、もう一度充電してください。
- ※それでも改善されないときは、充電電池の寿命です。

シェーバーの電源ボタンを押しても作動しない

- ▶シェーバーに充電アダプタが接続されていませんか?
- 充電アダプタを外してください。
- ▶充電はしましたか?
- 約10時間、充電をしてください。
- ▶刃が動かなくなるほど汚れているか、破損していませんか?
- シェービングユニットをお手入れするか、刃を交換してください。

- 保証書の指示がない場合、

シェーバー本体のモーターは回転しているが、内刃が回転しない

- ▶外刃にキズ、ヘコミはありませんか?
- 刃を交換してください。(替え刃品番: SH30/SI)

充電できない

- ▶充電アダプタの電源プラグ部はコンセントにきちんとして差し込めていますか?
- シェーバー本体の電源コネクタ受部に充電アダプタのコードがきちんとはまり込んでいますか?確認してください。
- ▶充電アダプタの電源コードが断線していませんか?
- 充電アダプタの電源コードが断線している場合は、お買い上げの販売店または小泉成器部品センターで取扱いしているフィリップス社製の同等充電アダプタ(品番: A00390)をご購入していただき、交換してください。

- 上記の点を確認し、正常な状態に戻らない場合は、お買い求めの販売店から小泉成器修理センターへお問い合わせ願います。

⑬ 保証とアフターサービス

保証書と修理サービスについて(必ずお読みください。)

〈保証書・表裏面に付属〉

- 保証書は、必ずお買い上げの販売店(名)等の記入をお確かめのうえ、販売店から受け取っていただき、大切に保管してください。

保証期間	お買い上げ日から2年間
対象部分	本体、充電アダプタ(シェービングユニット、保護キャップを除く)

【補修用性能部品の保有期間】

- 性能部品とは、その製品の機能を維持するために必要な部品です。

【ご不明な点や修理に関するご相談は】

- 修理に関するご相談らびにご不明な点は、お買い上げの販売店または、小泉成器修理センターにお問い合わせください。

【修理を依頼されるときは】

- 修理をご依頼される前に、この取扱説明書をよくお読みいただき、再度点検してください。尚、異常のあるときはご使用を中止し、お買い上げの販売店または、小泉成器修理センターへご連絡ください。

【保証期間中とは】

- 製品と保証書をご用意いただき、お買い上げの販売店または、小泉成器修理センターにご相談ください。保証書の記載内容により無料修理いたします。

【保証期間が過ぎているときは】

- 修理によって商品の機能が保持できる場合は、補修用性能部品の保有期間内であれば、ご希望により有料で修理させていただきます。

【海外での本製品の保証及アフターサービスについて】

- 本製品の保証は海外においても有効です。(同シリーズ製品の取り扱いがある国に限り)

- 日本国外のフィリップスサービス部門においても保証期間内及び保証期間の経過後のアフターサービスを受けることができますが、この場合多少日数を要する場合があります。

- 海外にてアフターサービスを受けられる場合は、現地のフィリップスサービス部門にお問い合わせください。尚、お持ちの品がございましたら下記までご連絡ください。

Philips Consumer Lifestyle Service Department P.O.Box 20100 9200 CA DRAUGHTEN The Netherlands Fax: +31 20 591 2985

【お客様の個人情報の取り扱いについて】

- お問い合わせいただいたお客様の個人情報、株式会社フィリップス・ジャパンのホームページ <http://www.philips.co.jp/>に掲載されている「お客様の個人情報の取り扱いについての当社の方針」に基づき適切に管理いたします。

便 利 メモ	
お買い上げ日	年 月 日
お買い上げ店名	TEL. ()

ご使用の時、このような症状はありませんか?
●本体にさわると時々電気が感ずる。
●ごくごく短い臭いがある。
●電源コード部が熱くなり通電したり、しなかったりする。
●その他の異常、故障がある。

※安全のための点検

このような症状の場合は、故障や事故防止のため、電源をOFFにし、充電アダプタをコンセントから引き、必ず販売店または、小泉成器修理センターにご相談ください。


©2018 Philips Japan, Ltd.
3000.0134.084.2(05/18)

フィリップス 電動シェーバー 保証書

CERTIFICATE OF PURCHASE 取扱修理

この保証書は、「無料修理規定」記載内容で無料修理を行うことをお約束するものです。お買い上げの日から下記期間中に故障が発生した場合は、製品と保証書をご用意いただき、お買い上げの販売店または、小泉成器修理センターにご相談ください。お客様にご記入いただいた個人情報(保証書の控え)は、株式会社フィリップス・ジャパンのホームページ <http://www.philips.co.jp/>に掲載されているお客様の個人情報の取り扱いについての当社の方針」に基づき適切に管理いたします。

品 名	電動シェーバー
品 番	S1085/04
保 証 期 間	お買い上げ日より2年
対 象 部 分	本体、充電アダプタ(シェービングユニット、保護キャップを除く)
お買い上げ日	年 月 日
ご住所	
お 客 様	ご氏名 ご住所 電話番号 販売店名・住所・電話番号
★ 販 売 店	

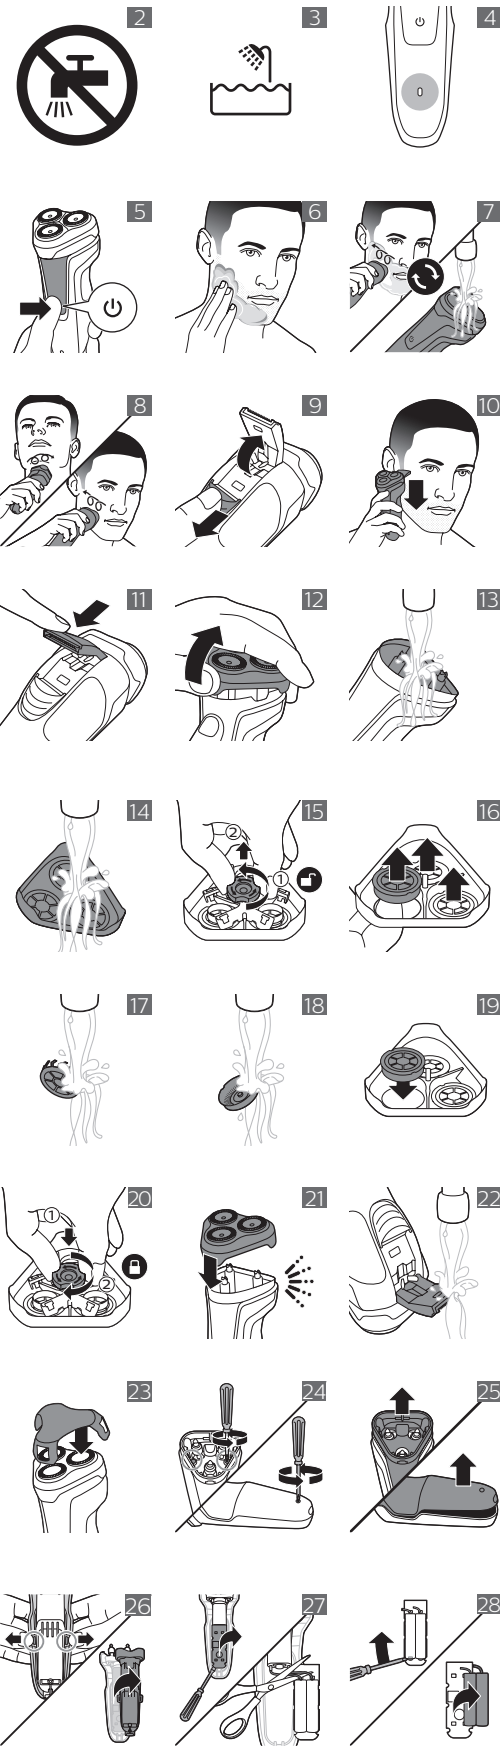

General description (Fig. 1)

- 1 Protection cap
- 2 Shaving unit
- 3 On/off button
- 4 Charging light
- 5 Socket for small plug
- 6 Retaining frame
- 7 Cutter
- 8 Guard
- 9 Pop-up trimmer
- 10 Trimmer release slide
- 11 Supply unit
- 12 Small plug

Note: You can find the type number on the back of the shaver.

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome. Please read this user manual, as it contains information about the features of this shaver as well as some tips to make shaving easier and more enjoyable.

Important safety information

Read this important information carefully before you use the appliance and its accessories and save it for future reference. The accessories supplied may vary for different products.

Danger

- Keep the supply unit dry (Fig. 2).

Warning

- To charge the battery, only use the detachable supply unit (A00390) provided with the appliance.
- The supply unit contains a transformer. Do not cut off the supply unit to replace it with another plug, as this causes a hazardous situation.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Always unplug the shaver before you clean it under the tap.
- Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.
- Do not open the appliance to replace the rechargeable battery.

Caution

- Never immerse the cleaning system or the charging stand in water and do not rinse it under the tap (Fig. 2).
- Never use water hotter than 60°C to rinse the shaver.
- Only use this appliance for its intended purpose as shown in the user manual.
- For hygienic reasons, the appliance should only be used by one person.
- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.
- If your shaver comes with a cleaning system, always use the original Philips cleaning fluid (cartridge or bottle, depending on the type of cleaning system).
- Always place the cleaning system on a stable, level and horizontal surface to prevent leakage.
- If your cleaning system uses a cleaning cartridge, always make sure the cartridge compartment is closed before you use the cleaning system to clean or charge the shaver.
- When the cleaning system is ready for use, do not move it to prevent leakage of cleaning fluid.
- Water may drip from the socket at the bottom of the shaver when you rinse it. This is normal and not dangerous because all electronics are enclosed in a sealed power unit inside the shaver.
- Do not use the supply unit in or near wall sockets that contain an electric air freshener to prevent irreparable damage to the supply unit.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

General

- This shaver is waterproof (Fig. 3). It is suitable for use in the bath or shower and for cleaning under the tap. For safety reasons, the shaver can therefore only be used without cord.
- The supply unit is suitable for mains voltages ranging from 100 to 240 volts.
- The supply unit transforms 100–240 volts to a safe low voltage of less than 24 volts.

Charging

Note: This appliance can only be used without cord.

When you charge the appliance for the first time or after a long period of disuse, let it charge for at least 10 hours.

A fully charged appliance provides up to 45 minutes of shaving time.

The shaving time may be less as a result of your shaving behavior, your cleaning habits or your beard type.

Charging with the supply unit

- 1 Make sure the shaver is switched off.
 - 2 Put the small plug in the shaver and put the supply unit in the wall socket.
- The display of the shaver indicates that the shaver is charging.
- 3 After charging, remove the supply unit from the wall socket and pull the small plug out of the appliance.

Charge indications

Battery low

When the battery is almost empty, the appliance starts working more slowly.

Charging

When the appliance is charging, the charging light lights up white continuously (Fig. 4).

- The charging light will keep lighting up white when the appliance is fully charged.

Note: After charging, remove the supply unit from the wall socket and pull the small plug out of the appliance.

Using the appliance

Note: This appliance can only be used without cord.

Switching the appliance on and off

- 1 To switch the appliance on or off, press the on/off button once (Fig. 5).

Shaving tips

- Use the shaver with shaving gel or foam for extra skin comfort, or use the shaver dry for extra convenience.
- We advise you to use the shaver with shaving gel or foam when you use it for a wet shave. Do not use thick shaving cream or shaving oil with this shaver.
- When you use the shaver for dry shaving, we advise you to make sure your skin is fully dry so that the shaver glides smoothly over your skin.
- For best results on skin comfort, pre-trim your beard if you have not shaved for 3 days or longer.
- For optimal shaving results, make circular movements during use.
- The shaver is waterproof and can be used in the bath or shower.
- Your skin may need 2 or 3 weeks to get accustomed to the Philips shaving system.

Wet shaving

For a more comfortable shave, you can also use this appliance on a wet face with shaving foam or shaving gel.

To shave with shaving foam or shaving gel, follow the steps below:

- 1 Apply some water to your skin.
- 2 Apply shaving foam or shaving gel to your skin (Fig. 6).
- 3 Rinse the shaving unit under the tap to ensure that the shaving unit glides smoothly over your skin (Fig. 7).
- 4 Switch on the appliance.
- 5 Move the shaving heads over your skin in circular movements to catch all hairs growing in different directions (Fig. 8). Exert gentle pressure for a close, comfortable shave.

Note: Rinse the shaving unit regularly to ensure that it continues to glide smoothly over your skin.

- 6 Dry your face.
- 7 Clean the appliance after use (see 'Cleaning and maintenance').

Note: Make sure you rinse all foam or shaving gel off the appliance.

Dry shaving

- 1 Switch on the appliance.
 - 2 Move the shaving heads over your skin in circular movements to catch all hairs growing in different directions (Fig. 8). Exert gentle pressure for a close, comfortable shave.
- Note: Do not press too hard, this can cause skin irritation.
- 3 Clean the appliance after use (see 'Cleaning and maintenance').

Trimming

You can use the trimmer to groom your sideburns and moustache.

- 1 Push the trimmer release slide downwards to open the trimmer (Fig. 9).
- 2 Switch on the appliance.
- 3 Hold the trimmer perpendicular to the skin and move the appliance downwards while you exert gentle pressure (Fig. 10).
- 4 After trimming, switch off the appliance.

- 5 Clean the trimmer.
- 6 Close the trimmer ('click') (Fig. 11).

Cleaning and maintenance

Cleaning the shaver under the tap

Clean the shaver after every shave for optimal performance.

Always unplug and switch off the appliance before you clean it.

Note: Water may leak from the socket at the bottom of the shaver when you rinse it. This is normal and not dangerous because all electronics are enclosed in a sealed power unit inside the shaver.

Be careful with hot water. Always check if the water is not too hot, to prevent burning your hands.

Never dry the shaving unit with a towel or tissue, as this may damage the shaving heads.

- 1 Hold the shaving unit and first lift the front, then the back upwards of the appliance (Fig. 12).
- Note: Make sure to hold the shaving unit while doing so.
- 2 Rinse the hair chamber under the tap (Fig. 13).
 - 3 Rinse the inside of the shaving unit under a warm tap (Fig. 14).
 - 4 Rinse the outside of the shaving unit under a warm tap.

Thorough cleaning

- 5 Turn the lock anticlockwise and remove the retaining frame from the shaving unit (Fig. 15).
- 6 Remove and clean one shaving head at a time (Fig. 16). Each shaving head consists of a cutter and a guard.

Do not clean more than one cutter and guard at a time, since they are all matching sets. If you accidentally mix up the cutters and guards, it may take several weeks before optimal shaving performance is restored.

- 7 Remove the cutter from the shaving guard and rinse it with water (Fig. 17).
- 8 Rinse the inside and outside of the shaving guard with water (Fig. 18).
- 9 Put the shaving heads back into the shaving unit (Fig. 19). Make sure that the projections of the shaving heads fit exactly into the recesses.
- 10 Put the retaining frame back into the shaving unit and turn the lock clockwise (Fig. 20).
- 11 Reattach the shaving unit (Fig. 21).

Note: If you cannot reattach the shaving unit properly, check if you have inserted the shaving heads properly and if the retaining frame is locked.

- 12 Carefully shake off excess water, open the shaving unit again and leave it open to let the shaving unit air dry completely.

Caution: Be careful not to hit the shaving unit against anything while you shake off excess water.

Cleaning the trimmer

Clean the trimmer every time you have used it.

- 1 Switch off the appliance and disconnect it from the wall socket.
- 2 Push the trimmer release slide downwards to open the trimmer (Fig. 9).
- 3 Rinse the trimmer under the tap (Fig. 22).
- 4 Carefully shake off excess water and let the trimmer dry.
- 5 Close the trimmer ('click') (Fig. 11).

Tip: For optimal trimming performance, lubricate the trimmer teeth with a drop of sewing machine oil regularly.

Storage

We advise you to let the appliance dry before you put the protection cap on it.

- 1 Switch off the appliance.
- 2 Put the protection cap on the shaving unit after use to prevent damage and to avoid dirt accumulation in the shaving heads (Fig. 23).

Replacement

Replacing the shaving heads

For maximum shaving performance, we advise you to replace the shaving heads every two years. Replace damaged shaving heads immediately. Always replace the shaving heads with original Philips shaving heads' (see 'Ordering accessories').

- 1 Switch off the appliance and disconnect it from the power outlet.
- 2 Hold the shaving unit and first lift the front, then the back upwards of the appliance.

Note: Make sure to hold the shaving unit while doing so.

- 3 Turn the lock anticlockwise and remove the retaining frame.
- 4 Remove the shaving heads and place new ones in the shaving unit. Make sure that the projections of the shaving heads fit exactly into the recesses.
- 5 Put the retaining frame back into the shaving unit and turn the lock clockwise (Fig. 20).
- 6 Reattach the shaving unit.

Note: If you cannot reattach the shaving unit properly, check if you have inserted the shaving heads properly and if the retaining frame is locked.

Ordering accessories

To buy accessories or spare parts, visit www.shop.philips.com/service or go to your Philips dealer. You can also contact the Philips Consumer Care Center in your country (see the international warranty leaflet for contact details).

The following accessories and spare parts are available:

- SH30/51 Philips shaving heads

Note: Availability of the accessories may differ by country.

Recycling

- Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.
- This product contains a built-in rechargeable battery which shall not be disposed of with normal household waste. Please take your product to an official collection point or a Philips service center to have a professional remove the rechargeable battery.
- Follow your country's rules for the separate collection of electrical and electronic products and rechargeable batteries. Correct disposal helps prevent negative consequences for the environment and human health.

Removing the rechargeable battery

Only remove the rechargeable battery when you discard the shaver. Before you remove the battery, make sure that the shaver is disconnected from the mains and that the battery is completely empty.

Take any necessary safety precautions when you handle tools to open the shaver.

Be careful, the battery strips are sharp.

- 1 Disconnect the shaver from the wall socket.
 - 2 Let the shaver operate until it stops.
 - 3 Remove the screws in the back of the shaver and in the hair chamber (Fig. 24).
 - 4 Remove the top part of the shaver (Fig. 25).
 - 5 Remove the front panel and the back panel (Fig. 25).
 - 6 Take out the power unit (Fig. 26).
- Be careful, the hooks are sharp.
- 7 Bend the snap hooks aside and remove the transparent cover of the power unit (Fig. 26).
 - 8 Lift out the battery holder and cut the wires with a pair of cutting pliers or scissors (Fig. 27).
 - 9 Bend the battery tags aside with a screwdriver (Fig. 28).
 - 10 Remove the rechargeable batteries.

Warranty and support

If you need information or support, please visit www.philips.com/support or read the international warranty leaflet.

Warranty restrictions

The shaving heads (cutters and guards) are not covered by the terms of the international warranty because they are subject to wear.

Troubleshooting

This chapter summarizes the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit www.philips.com/support for a list of frequently asked questions or contact the Consumer Care Center in your country.

Problem	Possible cause	Solution
The shaver does not shave as well as it used to.	The shaving heads are damaged or worn.	Replace the shaving heads.
	Foam or gel residues clog up the shaving heads.	Rinse the shaving unit under a hot tap.
	You have not inserted the shaving heads properly.	Make sure that the projections of the shaving heads fit exactly into the recesses.
The shaver does not work when I press the on/off button.	The rechargeable battery is empty.	Recharge the battery.
The shaver does not work, although it is connected to the mains.	This shaver is not designed to be used directly from the mains.	Recharge the battery and disconnect the shaver from the mains.
My skin is slightly irritated after shaving.	Your skin has not yet adapted to the new shaving system.	Wait at least three weeks to allow your skin to adapt to the shaver. Do not use different shaving methods during this period, it will be easier for your skin to adapt.
	Your skin is sensitive to dry shaving.	Use the shaver with shaving gel or shaving foam and with plenty of water for extra skin comfort.
	You are only shaving with water.	Use the shaver with shaving gel or shaving foam and with plenty of water for extra skin comfort.
	Your skin is irritated by the type of foam you use.	Use the shaver with shaving gel or shaving foam and with plenty of water for extra skin comfort.